



INSTRUCTION REF: IN133

ISSUE No. 5

DATE 23.08.06

Page 1 of 5

TELEPHONE:

SERVICE (44) 01332 875665

FAX:

SERVICE (44) 01332 875536

- INSTALLATION INSTRUCTIONS
  - SAFETY INSTRUCTIONS
  - USER INSTRUCTIONS

## HEATED AND AMBIENT CABINETS

MODEL: HOT 12, HOT15, HOT 18,  
AMB12, AMB15, and AMB18



TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

### **WARNING**

**To avoid scratching the highly polished exterior surface of this equipment whilst in transit, the protective film on the exterior surfaces has NOT been removed.**

**It is IMPORTANT that this protective film is peeled off before the equipment is used**

### **OPERATING THE CABINET (not all units are heated)**

1. Plug machine in to power supply. The red indicator light will show to indicate power to the unit.
2. Turn the cabinet dial to the required setting, the right hand side green lamp will show indicating power to the element, this will extinguish when the desired temperature is reached.

This procedure will be repeated automatically as the thermostat maintains a constant temperature. The cabinet temperature is shown on the digital display on the fascia

When loading the machine please leave some space around the rack to give good airflow, never cover racks with tin foil, otherwise the efficiency of the machine will be reduced.

### **OPERATING THE QUARTZ LAMP GANTRY (not all units come with gantry)**

Units which have quartz lamp gantry have two mains power cables.

1. Ensure both of the power cables are plugged in to the mains and turned on
2. To turn on the lamp gantry use the on/off switch on the fascia.

### **CLEANING**

Before cleaning any electrical unit always isolate the power supply.

1. Remove the containers, empty debris and clean in hot soapy water.
2. With the containers removed wipe down the machine with a soft cloth, do not use abrasive materials.
3. Stainless steel cleaners maybe used and cleaning instructions on the product must be adhered to.



**TELEPHONE: SERVICE (44) 01332 875665**  
**FAX: SERVICE (44) 01332 875536**

4. To clean inside the cabinet, the doors can be removed. Simply take hold of the handle on the door and supporting the other side of the door lift the door upward until the bottom of the door clears the bottom rail of the cabinet. Then tilt the door so the bottom of the door comes forward, this allows the door to slide down and away from the unit
5. The two bottom door rails can be easily lifted out to wipe down.
6. The inner shelves and element cover can be removed easily as they have been designed in three sections. The element tray holds the doors in position so it is advisable to take the doors out first. Please note that the element cover must be replaced before attempting to use the unit.

Let the unit cool down before attempting to clean

### **FAULT FINDING**

The most common fault is that the unit is not connected to with the mains supply, and so the mains lamp will not illuminate, in this circumstance please try the following before calling for service assistance.

1. Check unit is plugged into mains supply and the socket is switched on.
2. Check the fuse in the plug.
3. Try a different socket
4. If the unit has been permanently connected to a fused switch, ask a qualified electrician or competent person to check the connections.

One of the above may cure your fault, if not contact your distributor

### **RATING**

Hot 12 (Cheflink Alpha) **1500W, 6.25A, 240V** (one mains plug)

Hot 12 SG/DG (Cheflink Alpha SG/DG) **2400W, 10A, 240V** (one mains plug)

Hot 12 DG with extra shelf lit (Cheflink Alpha DG) **3300W, 13.75A, 240V** (two mains plugs)

Hot 15 (Cheflink Beta) **2500W, 10.41A, 240V** (one mains plug)

Hot 15 SG/DG (Cheflink Beta SG/DG) **3700W, 15.41A, 240V** (two mains plugs)



TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

Hot 15 DG with extra shelf lit (Cheflink Beta DG) **4900W, 20.41A, 240V** (two mains plugs)

Hot 18 (Cheflink Delta) **3000W, 12.5A, 240V** (two mains plugs)

Hot 18 SG/DG (Cheflink Delta SG/DG) **4500, 18.75A, 240V** (two mains plugs)

Hot 18 DG with extra shelf lit (Cheflink Delta DG) **6000W, 25A, 240V** (two mains plugs)

AMB 12

AMB 12 SG/DG **900W, 3.75A, 240V** (one mains plug)

AMB 12 DG with extra shelf lit **1800W, 7.5A, 240V** (one mains plug)

AMB 15

AMB 15 SG/DG **1200W, 5A, 240V** (one mains plug)

AMB 15 DG with extra shelf lit **2400W, 10A, 240V** (one mains plug)

AMB 18

AMB 18 SG/DG **1500W, 6.25A, 240V** (one mains plug)

AMB 18 DG with extra shelf lit **3000, 12.5A, 240V** (one mains plug)



**TELEPHONE: SERVICE (44) 01332 875665**

**FAX: SERVICE (44) 01332 875536**

Parry Catering recognises our obligations to the EU DIRECTIVE covering the waste disposal of electrical and electronic equipment (WEEE), Parry Catering are committed to this policy in order to help conserve the environment.

At the end of this unit's life you **MUST** dispose of it in an approved manner. You **MUST** not discard the unit or place it in the refuse bin.

You have several options:

- a) Take the unit to an approved WEEE scheme company, there will be one in your area.
- b) Take the unit to an approved waste disposal site; many sites are managed by your local authority.
- c) Contact the unit's manufacturer, importer or their agent the contact details will be on the unit.

There will probably be a charge for this service which will depend on the physical location of the unit and size you will be given a collection price for a curb side collection based on commercial rates prevailing at the time.

It should be noted that the unit to be collected should be suitably packed and sealed to prevent dangerous gases and fluids from escaping. The condition of the unit must also be clean to comply with health and safety regulations.