

User Instruction Manual

BURCO

Induction Hob




Please read and keep these instructions

This covers the Burco Induction hob

CTIN01

444440541

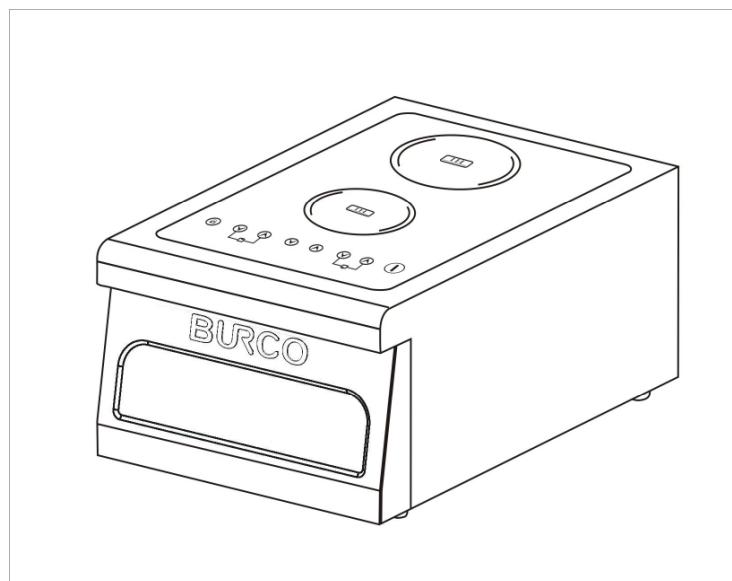


Specification

- 1). Product code: CTIN01
- 2). Voltage: 230V~ / 50Hz
- 3). Temperature: Front-zone: 60°-220°, Behind-zone: 60°-240°



IMPORTANT

Please read carefully the following instructions before using the induction hob

- 1) Do not plug in appliance with wet hands.
- 2) Do not plug into a socket where several other appliances are plugged in.
- 3) Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4) Do not modify the parts, or repair the unit by yourself.
- 5) Do not use the unit near flame or wet places.
- 6) Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7) Do not place on unstable surfaces.
- 8) Do not move the unit when a pot or the pan is on it.
- 9) Do not heat the pot empty or overheat the pot.
- 10) Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11) Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12) Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13) Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14) If the surface is cracked, please switch off and take to the service center immediately.
- 15) Do not block the air intake or exhaust vent.
- 16) Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17) Do not place the unit close to the objects which are affected by the magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18) The power cord must be replaced by qualified technicians.
- 19)  The surface is liable to get hot during use.
- 20) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

User Instruction Manual

How to Use (The operation of both zones are the same)

- 1) Place usable cooking utensils in the center of the top plate and plug in, press . This will show "---", indicating the power of the front zone is connected normally.
- 2) Press  again. The front zone will now enter the state of heating. The default temperature of is 220°C. The temperature can be adjusted. Please note that the temperature range in the front zone is from 60°C-220°C.
- 3) The operation of the behind zone is the same as the front zone, please note that the default temperature is 240°C in behind zone, and the temperature range is from 60°C-240°C.

Usable and Non-usable Utensils

1). Usable Pans

Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26cm.



Enameled Iron Pot Iron or Enameled Iron Pot Castiron Pan Iron Pot Deep-Fry Pan Stainless Steel Pot Iron Plate

2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



Rounded Bottom Pot Aluminum Copper Pot Bottom Measuring Less than 12cm Pot with Stands Ceramic Pot Heat-Resistant Glass Pot

How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).

Guarantee

This appliance is guaranteed against defective materials or faulty workmanship. For length of guarantee please contact your supplier.

This guarantee is given subject to the hob being used in accordance with the instructions on the supply voltage marked on it and to the usual fair wear and tear conditions.

The guarantee does not cover consequential damage arising out of any failure acceptable under guarantee, nor does it cover damage resulting from misuse, accident or unauthorised alterations to the hob.

In any communication with the supplier or manufacturer, it is essential to quote the catalogue number marked on the hob.

Proof of purchase will be required.

In any communication with the service department, it is essential to quote the model and serial number marked on the rating label.

This guarantee, in no way diminishes the buyer's statutory rights.

Burco products are intended for commercial use as detailed in these instructions.

Burco has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

Model		CTIN01
SKU Number		444440541
Dimensions in mm	H	275
	W	320
	D	600
Weight in Kg		12
Power rating		3kW

Customer helpline

For spares and after-sales service please

contact Burco on:

T: 0844 815 3737

F: 0844 248 4123

E: info@gdha.com

Glen Dimplex Professional Appliances,
A Division of Glen Dimplex Home Appliances
Stoney Lane,
Prescot,
Merseyside L35 2XW
www.burco.co.uk



**GLENDIMPLEX
PROFESSIONAL APPLIANCES**