


**INSTRUCTION FOR USE AND INSTALLATION
FRYER RFE 16 C / RFE 20 C**

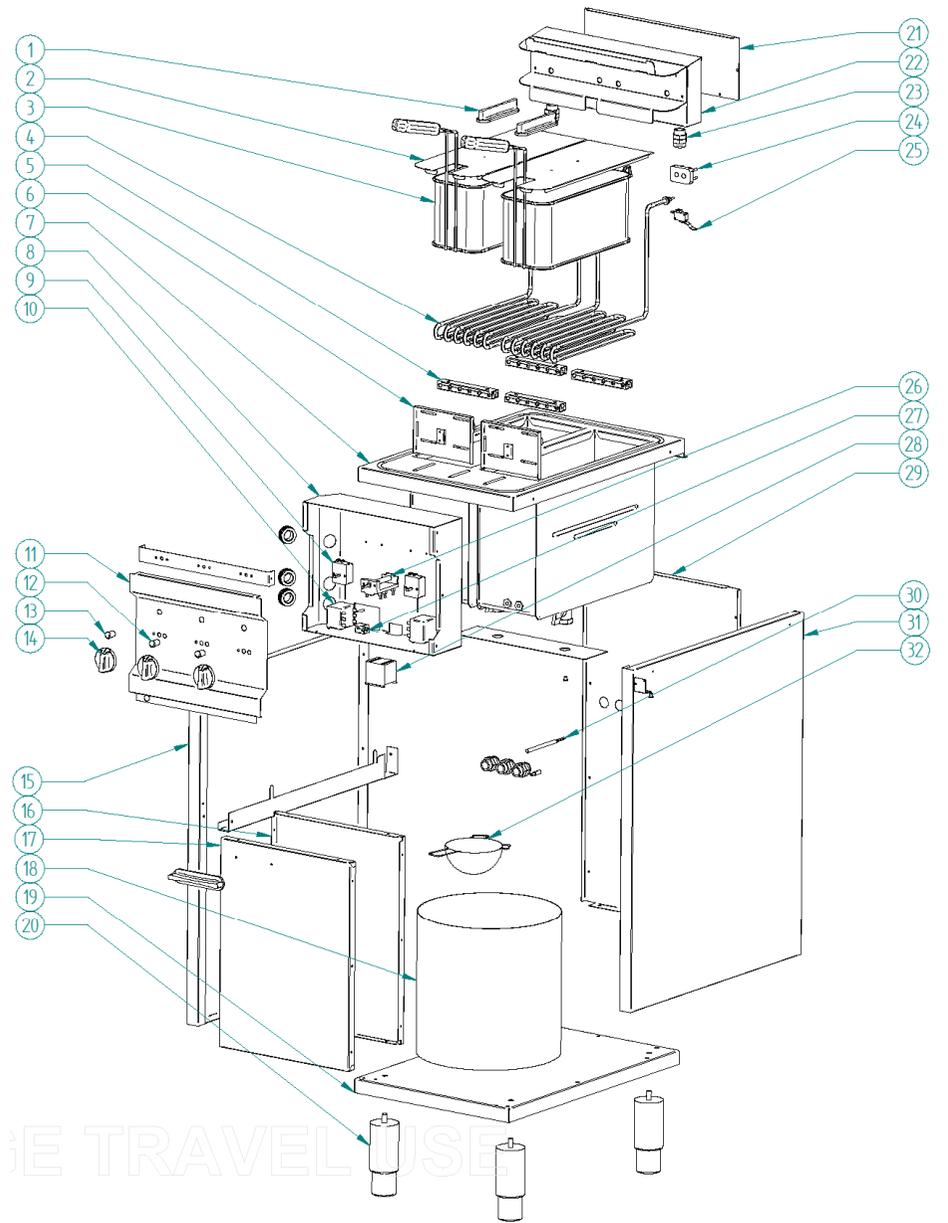

Made in France



Congratulations for the acquisition of this upmarket appliance made in France. You chose an appliance which alloys the best technical qualities with a big user-friendliness. We wish you the biggest contentment

1. SECURITY INSTRUCTIONS

Please respect these instructions scrupulously to avoid any risk of fire, electric shock, scald or other wounds and damage.

During the use of this appliance, fundamental circumspection of security must always be noticed, such as:

- Take into account the instructions to be systematically kept with the appliance.
- Install the appliance always in instructions respect. A 10 cm distance minimum with the partition or the wall is necessary.
- Protect the appliance from direct light of the sun, frost and humidity.
- Never leave the appliance within the reach of children or disabled persons without surveillance during or after use; the oil remains hot for a long time.
- Ensure that only trained personnel operate the appliance.
- Never move the appliance when it is working or still hot.
- Check that the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance: always use handles and control knobs.
- Do not use the appliance for other functions than determined use.
- Do not leave the cord of electrical feeding in the contact of hot surfaces.
- The appliance should not be used close to combustible materials.
- Entrust compensations only to a skilled person.
- Use only spare parts of origin.
- To avoid any damage on the heating element, do not use solid fats.
- Never warm your machine up if the heating elements are not plunged into oil, you may cause a fire
- Never plug in your deep fryer before having filled in the container with oil
- The metal parts of the deep fryer become very hot during use.
- Never exceed the maximum capacity of your fryer which is of 4 kg for RFE 16 C and of 1.5kg per container for RFE 20 C.
- Never place the lid on the deep fryer while it is in use.
- Never put the control unit in water. Remove it before washing the rest of your deep fryer.
- After cleaning, ensure that all parts are completely dry before using the appliance.
- If the cord is harmed, it must be replaced by the producer, his after sale service or persons of similar skills to avoid any risk.
- Never leave your fryer working without any watching
- Do not plunge foods made with an important humidity, you risk a boiling over; the same for bigger foods.
- Use caution when removing the electrical module; the temperature sensors and the element may be very hot.

Rep	Code	Qty	Pièce	Spare part
1	A15016	3	Poignée	Handle
2	50052	2	Couvercle	Lid
3	F04046	2	Panier	Basket
4	D02180	2	Résistance	Heating element
5	50053	8	Bride résistance	Heating element holder
6	50058SE	2	Cache bulbe thermostat	Sensor thermostat cover
7	50051SE	2	S/E cuve complète	Tank assembly
8	50038	1	Protection composants	Components protection
9	A06007	2	Thermostat régulation	Thermostat
10	A06012	2	Thermostat sécurité	Safety thermostat
11	50034	1	Bandeau avant	Front control panel
12	A08009	1	Voyant vert	Green pilot light
13	A08003	2	Voyant orange	Orange pilot light
14	A14078	3	Bouton 12 H	Knob 12 H
15	50044	1	Côté gauche	Left side
16	50045	1	Contre porte	Inner door
17	50047	1	Porte	Door
18	F05018	1	Pot camion	Pot
19	50037	1	Socle	Base
20	A13019	4	Pied	Foot
21	50036	1	Arrière boîtier	Back control pack casing
22	50055SE	1	S/E boîtier résistances	Control box heating element
23	A10032	5	Presse etoupe	Cord closer
24	A16010	1	Plaque à borne	Terminal plate
25	A07017	1	Microswitch	Microswitch
26	A01001	1	Comutateur	Commutator
27	A05011	1	Module protection	Module protection
28	A05008	1	Contacteur	Contacteur
29	50042	1	Arrière	Rear
30	C01050	1	Cable	Cord
31	50043	1	Côté droit	Right side
32	F04028	1	Passoire	Colander

Rep	Code	Qty	Pièce	Spare part
1	A15016	1	Poignée	Handle
2	51045	1	Couvercle	Lid
3	F04047	1	Panier	Basket
4	51046	4	Bride résistance	Heating element holder
5	50049SE	1	Cache bulbe thermostat	Sensor thermostat cover
6	50046SE	1	S/E cuve complète	Tank assembly
7	50038	1	Protection composants	Components protection
8	A05006	1	Contacteur	Contacteur
9	A05012	1	Module protection	Module protection
10	A06007	1	Thermostat régulation	Thermostat
11	A01002	1	Commutateur	Commutator
12	50034	1	Bandeau avant	Front control panel
13	A08003	1	Voyant orange	Orange pilot light
14	A08009	1	Voyant vert	Green pilot light
15	A14078	2	Bouton 12 H	Knob 12 H
16	B09003	1	Aimant	Magnet
17	50044	1	Côté gauche	Left side
18	50045	1	Contre porte	Inner door
19	50047	1	Porte	Door
20	A15016	1	Poignée	Handle
21	50036	1	Arrière boîtier	Back control pack casing
22	50035SE	1	S/E boîtier résistances	Control box heating element
23	A10032	5	Presse étoupe	Cord closer
24	D02178	3	Résistance	Heating element
25	A16010	1	Plaque à borne	Terminal plate
26	A07017	1	Microswitch	Microswitch
27	A06012	1	Thermostat sécurité	Safety thermostat
28	50042	1	Arrière	Rear
29	50043	1	Côté droit	Right side
30	C01049	1	Cable	Cord
31	F04028	1	Passoire	Colander
32	F05018	1	Pot camion	Pot
33	50037	1	Socle	Base
34	A13018	4	Pied	Foot



1 On/off pilot light

2 Commutator

3 Thermostatic pilot light

4 Thermostat

5. FUNCTIONING / MANIPULATION

a) Installation / assembly:

- Unpack carefully the device of its packaging.
- Remove the protective film around the machine
- Screw up the handle on the lid.
- Place the fryer on a plane and heatproof surface.
- Never place the device near a wall or near a partition makes of combustible materials even if it is very well isolated.
- A distance of minimum 10 cm with the partition or the wall is necessary.
- Place the product to enable easy access to the plug
- Then place all the accessories
- Keep the lid near the fryer to enable you covering it after use or in case of fire.

b) First starting:

Before the first use, wash the machine and all accessories.

Connection of the device

- Check that the tension and the frequency of the electricity network suit to the values indicated on the descriptive plate.
- Check that neither the cord nor the plug are damaged
- Make sure that every control knob is positioned on 0.
- Unwind completely the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

The machines intended to be linked in a permanent way with the fixed pipes must be provided with a device of disconnection.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, confide its connection to a qualified person .

c) Use of device :

Command and display	Function
Thermostat (n°4 on picture)	Temperature setting
Tripolar safety thermostat	Automatic stop in case of overheating
Microswitch	Automatic stop in case of improper positioning of the control unit
Commutator (n°2 on picture)	Selection of the power
Orange pilot light (n°3 on picture)	Oil is warming (pilot light on) Oil is hot (pilot light off)
Green pilot light (n°1 on picture)	Machine is on (pilot light on) Machine is off (pilot light off)

Putting on

- Make sure that the draining tap is closed.
- Insert the control unit into the slot being sure that it is pushed in all the way. The deep fryer will not function if the control unit is improperly inserted, the microswitch will prevent operation.
- Pour oil into the container when heating elements are cold. The oil level must be between the MIN and MAX marks.
- Turn on the commutator (n°2 on picture) ont one of the position according to the desired power
- Turn the thermostat control knob (n°3 on picture) to the desired position.
- When the orange pilot light is off, your deep fryer is ready for cooking.

REACH RULE

Never put the device among household waste.

The device must be put down in a centre of recycling for the electric equipment.

The materials of the device are indeed reusable. By eliminating correctly the electric and electronic wastes, the recycling and quite other shape of re-use of worn equipment, you participate in a significant way in the environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. GUARANTEE

Conditions of guarantee

The guarantee applicable to any device is the commercial guarantee of the distributor or the retailer. Please contact the store where you bought your device to know the precise conditions.

The guarantee grants no right for damages.

The dispositions which follow are not exclusive of the profit of the legal guarantee planned by articles 1641 and following ones of the Civil code relative to the defects and the latent defects.

Exclusion clauses of the guarantee

Bad installation and bad maintenance, in particular if they do not respect current regulations or instructions appearing in this user guide.

Cannot benefit from the guarantee the repairs required as a result of false operations, of inappropriate use, of carelessness or of excess loads of the device, as well as those resulting from variations of the power supply, over tension or from defective installations.

The damage due to shocks, bad weather is not flatware by the guarantee. The material travels at the risks of the user; in case of delivery by carrier, the consignee has to have reservations towards the carrier before any delivery of the device.

The guarantee comes to an end in case of intervention, of repair, of modification by no qualified persons, or of use in inappropriate purposes.

7. TECHNICAL SPECIFICATIONS

Model	RFE 16 C	RFE 20 C
Power	12 kW	12 kW
Outside dimensions	400 x 660 x 980 mm	400 x 660 x 980 mm
Volume	16 L	2 x 10 L
No element	3	2
Volatge	380-415 V 3 N ~	380-415 V 3 N ~
Ampere	17 A/ Phase	26 A/ Phase
Weight	34 Kg	38 Kg
Maximum charges (Kg)	4	2 x 1.5

The machine is delivered with a cord fitted with 5 wires

Wires colours correspondence	Phase 1	Brown
	Phase 2	Black
	Phase 3	Grey
	Neutral	Blue
	Earth	Yellow-Green

The equipotential connection marked by this symbol  must be linked with the equipotential conductive connection of your installation by means of a minimum conduction of a 2.5 mm² section.

8. NORMS AND LEGALS DISPOSALS

The device is conform to :

IEC/EN 60335-1
IEC/EN 60335-2-37
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002/96/CE (DEEE) N°34270064800021
2002/95CE (ROHS)
2006/95 CE
2004/108 CE



- Fill the basket in and plunge it slowly into the oil.
- When cooking is finished, lift the basket and set it on its stand.

Safety thermostat

In case of overheating or lack of oil, your deep fryer will automatically stop. Unplug it and let it cool. Then check the oil level:

- 1) Oil level is too low: add some oil and reload the knob (n°2 on picture)
- 2) Oil is too old: change it and reload the knob (n°2 on picture)
- 3) Other cases: call your after sale service



Stopping the appliance

- Set the thermostat control knob to zero
- Set the commutator to zero
- Unplug the appliance.
- Let the device cool.
- Clean the appliance (See 6.Cleaning)

d) Breakdown / repair:

In case of breakdown or of damaged part, please call your after-sales service and confide any technical operation to qualified person.

When you contact the after-sales service of your distributor or your store, give him the complete reference of your device (commercial name, type and serial number). This information appears on the visible descriptive plate behind the device.

6. CLEANING AND MAINTENANCE

- Let cool completely the device and the oil before any technical intervention or cleaning.
- Unplug the machine and remove the control unit before cleaning.
- For cleaning, only use non-abrasive products, clean regularly the external walls of your device with warm water and wash liquid: avoid the abrasive towelling. Rinse your device with a wet sponge.
- Caution : do not damage the heating element wires during cleaning
- Never clean the device under a water jet
- Never immerse the control unit in the water.