

Rowlett Rutland

PREMIER TOASTER INSTRUCTION BOOK all models

Please ensure that all packaging materials have been removed before you use your toaster.

SAFETY – PLEASE READ!

The temperature of accessible surfaces may be high when the appliance is operating.

Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. **They must be watched at all times.**

Do not leave toasters plugged into a live socket when not in use.

Always switch off at the plug.

This appliance is not intended to be operated by means of external timer or separate remote-control system.

Always allow a toaster to cool before putting away - allow 15 minutes.

Never move a toaster whilst in use.

Before doing any maintenance ensure that the toaster is unplugged from the electrical supply. Cleaning and user maintenance shall not be made by children without supervision.

Never use a knife or other sharp instrument to clear jammed slots or burnt crumbs (not only can this be dangerous but it can damage the elements).

If the power supply cable is damaged then the whole toaster must be returned to the supplier or other qualified person for replacement.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Keep the appliance and its cord out of reach of children less than 8 years when it is switched on or cooling down.

NEVER IMMERSE A TOASTER IN WATER


This appliance is intended to be used in household & similar applications such as:-

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments

Ensure your toaster is plugged in before turning it on. There is no separate on/off switch on the toaster as it forms part of the timer mechanism. Your toaster is "off" when the number "0" is on the top of the dial. All Rowlett Rutland Ltd toasters have a switch that enables you to control which slots are in use, saving on element wear and electricity. Choose how many slots you need and adjust the control switch accordingly.

Load bread into toaster with ejector lever (C) up. Lower to toast. Do not use bread that is too thick. Set the timer switch (B) between settings 1 and 2 according to your taste. It is better to use 1 day old bread. The neon indicator (A) will light and the timer will start. Power will be automatically turned off shortly before the timer completes its task. The toast can be removed immediately by using the ejector lever, or left in the machine to keep warm for several minutes.

**2, 4, 6, 8, SLICE TOASTERS
(4 slice bread illustrated)**

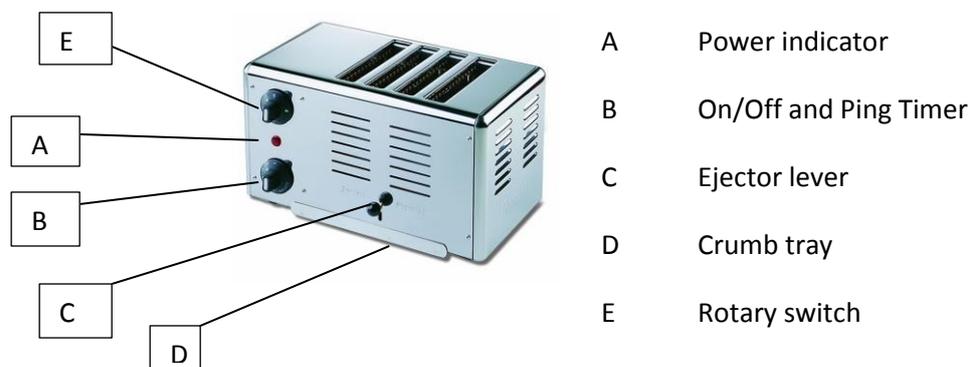

2-slice ,4-slice and 6-slice models

On 2-slice models the switch (E) in position "1" energises the left hand slot only; position "2" energises both switches. On 4-slice models the switch (E) in position "1" energises the slot 1 on the left; position "2" energises slot 2; position "3" energises slot 3; position "4" energises slot 4. On the six-slice model the switch (E) permits sequential powering of each pair of slots from the LH side (2/4/6). Wide slot toaster also have a bun mode (Single sided toasting)


8 slice

Slot selection is made by a rotary switch (E) which permits sequential powering of each pair of slots from the LH side (2/4/6/8).

Thick 'n Thin models

On the Thick 'n Thin model the left hand switch **(E)** energises the 1 or 2 bread slots (those on the left) or 1 or 2 thick slots on the right which should be used for toasting buns, teacakes or thicker slices of bread, or all four slots.

THICK 'N THIN & BRUNCH TOASTERS
(3 Slot Brunch model illustrated)

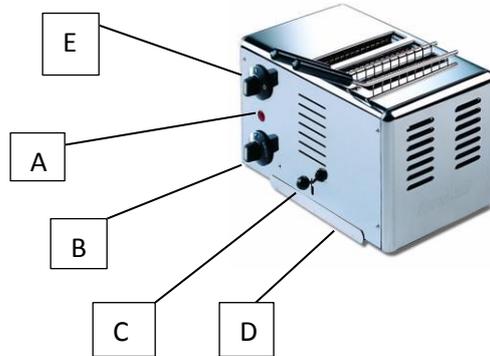

- A Power indicator
- B On/Off and timer
- C Ejector lever
- D Crumb tray
- E Bread or "thin" selector switch
Sandwich or "thick" selector switch

Brunch models

On Brunch models the rotary switch **(E)** energises t1 or 2 bread slots (those on the left) and/or the thick slot or sandwich slots. When making toasted sandwiches, using the Brunch toaster's special compartment, use a timer setting of between 4 and 5. Sandwiches should be made in the normal way (ie buttered on the inside). A wide variety of fillings can be used but all ingredients should be chopped or shredded to assist the cooking process. Hard cheese should always be grated. Meat, fish, eggs etc should always be pre-cooked. Suitable toasting bags are very useful if using a runny or thick filling (the sandwich should be placed wrapped inside the carrier but allow a vent for steam - slightly reduce cooking time).

For the Brunch model sandwich slot you **must** use the carrier provided even if only using it to toast one slice of bread. **Do not use the carrier in the bread slots, it must only be used in the special sandwich slot.**

DESIGNATION OF APPLIANCE INFORMATION

| <u>Number Of slots</u> | <u>Type</u> | <u>Finish</u> | <u>Electrical Specification & Model</u> | <u>Model</u> |
|------------------------|---------------------------|------------------------------|---|----------------|
| 2 | AT -Bread | S -Stainless/Polished | (3 nos) e.g.-151 | Premier |
| 3 | BT -Brunch | | | |
| 4 | DB -Double Brunch | | | |
| 6 | SAND -Sandwich | | | |
| 8 | TT -Thick N Thin | | | |
| 10 | TTS -Family Brunch | | | |
| 12 | WT -Wide slot | | | |

ELECTRICAL CONNECTION

Premier 2, 4 and 6-slot toasters operate from a standard electrical supply socket and are fitted with the appropriate plug. ***An 8-slot toaster requires a 20 amp service.***

CARE & MAINTENANCE

Wipe down with a damp cloth and proprietary multi-surface cleaner to remove any grease. Never use a scouring agent as this will scratch the finish. Always empty your crumb tray at frequent intervals as this aids toasting performance and reduces the risk of smell, smoke and burning. On the Brunch model after each use ensure any spilt filling is removed from carrier and crumb tray.

Bread containing fruit or nuts can be toasted but natural sugars present may cause them to stick to the guard rails on your toaster. Such debris should not be left on the guard rails as it will char and possibly smoke and can swell so as to damage the element.

Once the timer has started an element gives out heat from both sides, so the first “unpowered” slot will always give out heat on one side. On the Brunch and Thick ‘n Thin toasters once you turn the timer on, the middle slot always has one element working, even if both selector switches are “off”.

SERVICING & REPAIRS

Elements wear out with use and it is impossible to predict their life as this is affected by the amount and type of use and the quality of electrical supply. They can easily be damaged by careless handling. Your toaster has been designed that should anything go wrong all major components such as elements and switches can easily be replaced. Repairs or replacement of components should be undertaken only by a competent electrician. All components and fitting instructions can be obtained either from your supplier or directly from the manufacturer.

Rowlett Rutland Ltd

32 Bookham Industrial Park, Church Road,
Bookham, Surrey, UK. KT23 3EU

Tel: +44 (0)1372 453633/450855 Fax: +44 (0)1372 453536/453671

Issue 5 for 220-240V ~ March 2015