

[Exploded diagram and spare parts list](#)

Large contact grills: L518, L519 & L530


For machines with digital timer:

[Click here](#)

For machines without digital timer:


[Click here](#)

For machines with digital timer:

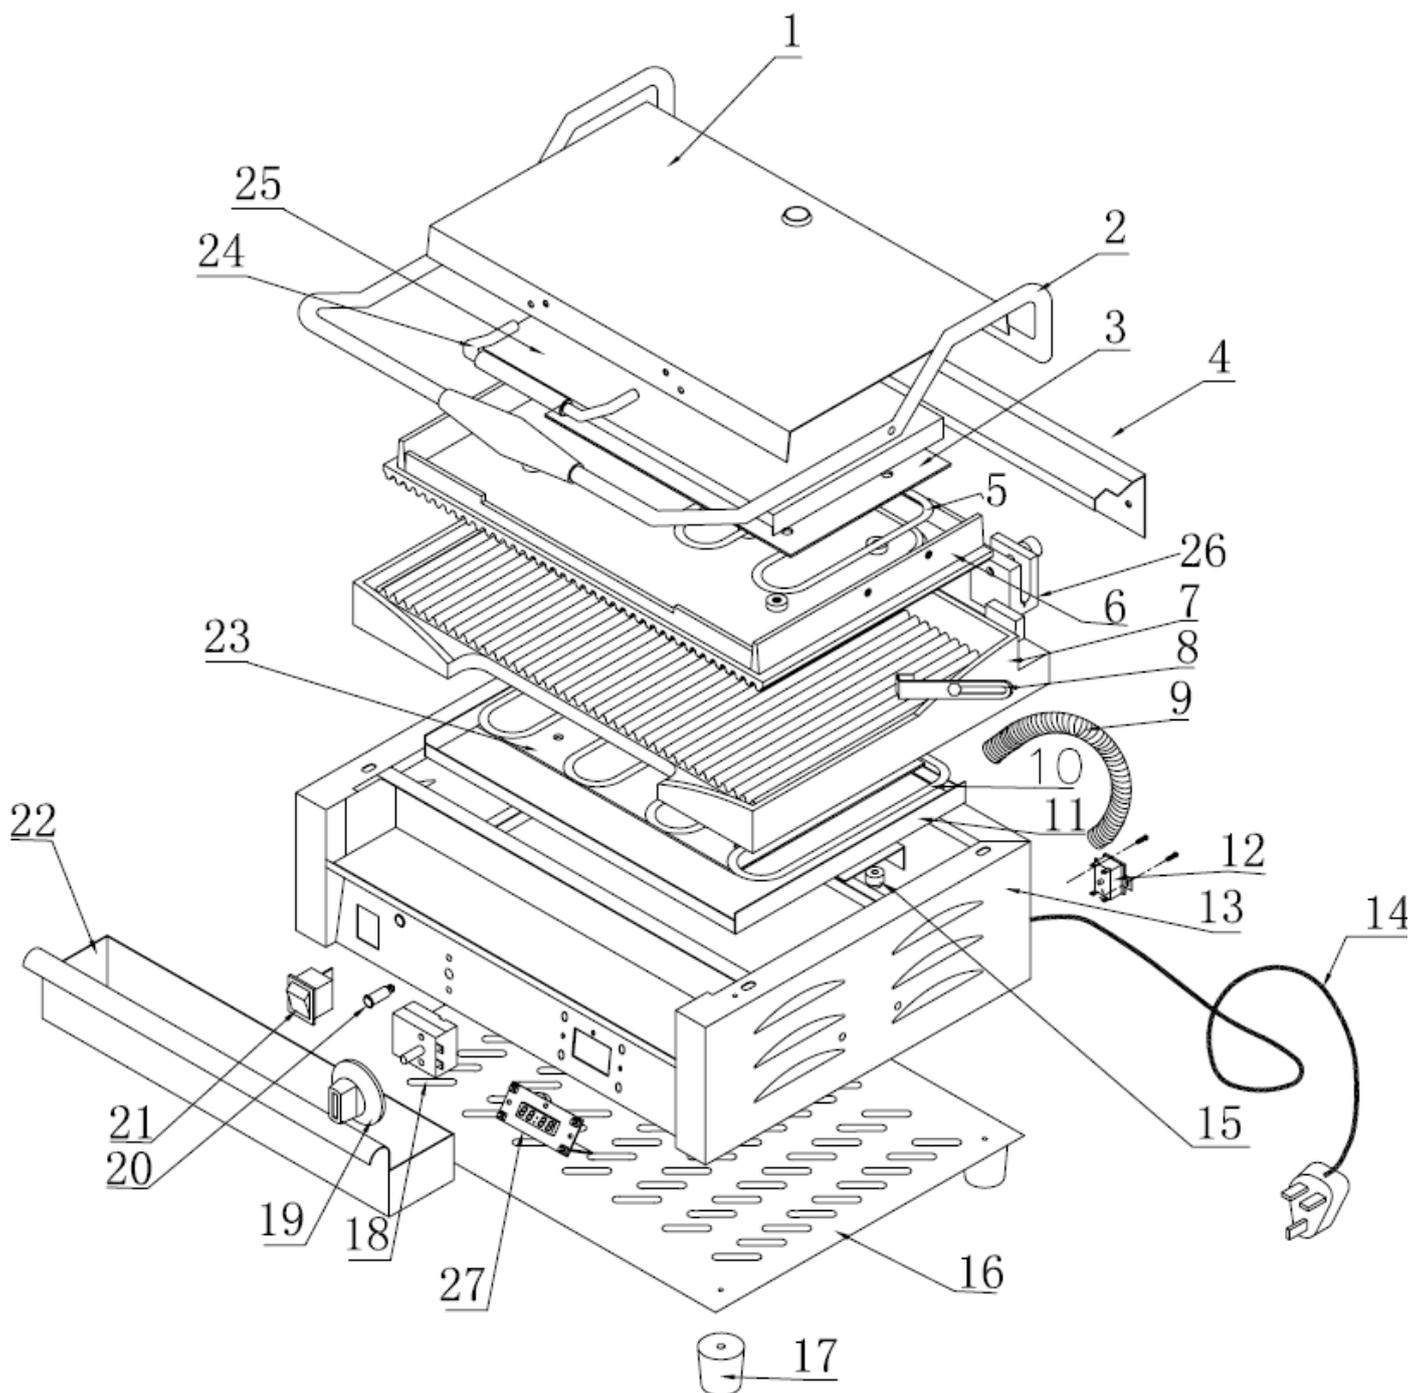

Machine	Explode	Code	Description
L518 L519 & L530 – Large Contact Grill with Timer	1		Top Cover
L518 L519 & L530 – Large Contact Grill with Timer	2	N482	main Handle
L518 L519 & L530 – Large Contact Grill with Timer	3		Mica Plate Upper
L518 L519 & L530 – Large Contact Grill with Timer	4		Rear Cover
L518 L519 & L530 – Large Contact Grill with Timer	5	N154	Heating Element Upper
L518 L519 & L530 – Large Contact Grill with Timer	6		Cast Plate Upper
L518 L519 & L530 – Large Contact Grill with Timer	7		Cast Plate Lower
L518 L519 & L530 – Large Contact Grill with Timer	8		Hinge
L518 L519 & L530 – Large Contact Grill with Timer	9		Plate Connecting Spring
L518 L519 & L530 – Large Contact Grill with Timer	10	N155	Heating Element Lower
L518 L519 & L530 – Large Contact Grill with Timer	11		Insulation Plate Lower
L518 L519 & L530 – Large Contact Grill with Timer	12	N126	Thermal Cut Out
L518 L519 & L530 – Large Contact Grill with Timer	13		Main Body
L518 L519 & L530 – Large Contact Grill with Timer	14		Plug & Lead
L518 L519 & L530 – Large Contact Grill with Timer	15		Ceramic Tube
L518 L519 & L530 – Large Contact Grill with Timer	16		Base Plate
L518 L519 & L530 – Large Contact Grill with Timer	17	AC689	Feet
L518 L519 & L530 – Large Contact Grill with Timer	18	N125	Thermostat
L518 L519 & L530 – Large Contact Grill with Timer	19	N129	Dial
L518 L519 & L530 – Large Contact Grill with Timer	20	N486	Indicator Light
L518 L519 & L530 – Large Contact Grill with Timer	21	N146	Switch
L518 L519 & L530 – Large Contact Grill with Timer	22	N478	Drip Tray
L518 L519 & L530 – Large Contact Grill with Timer	23		Mica Plate Lower
L518 L519 & L530 – Large Contact Grill with Timer	24	N484	Small Handle
L518 L519 & L530 – Large Contact Grill with Timer	25		Insulation Plate Upper
L518 L519 & L530 – Large Contact Grill with Timer	26		Tension Bracket
L518 L519 & L530 – Large Contact Grill with Timer	27	AD928	Timer

For machines without digital timer:

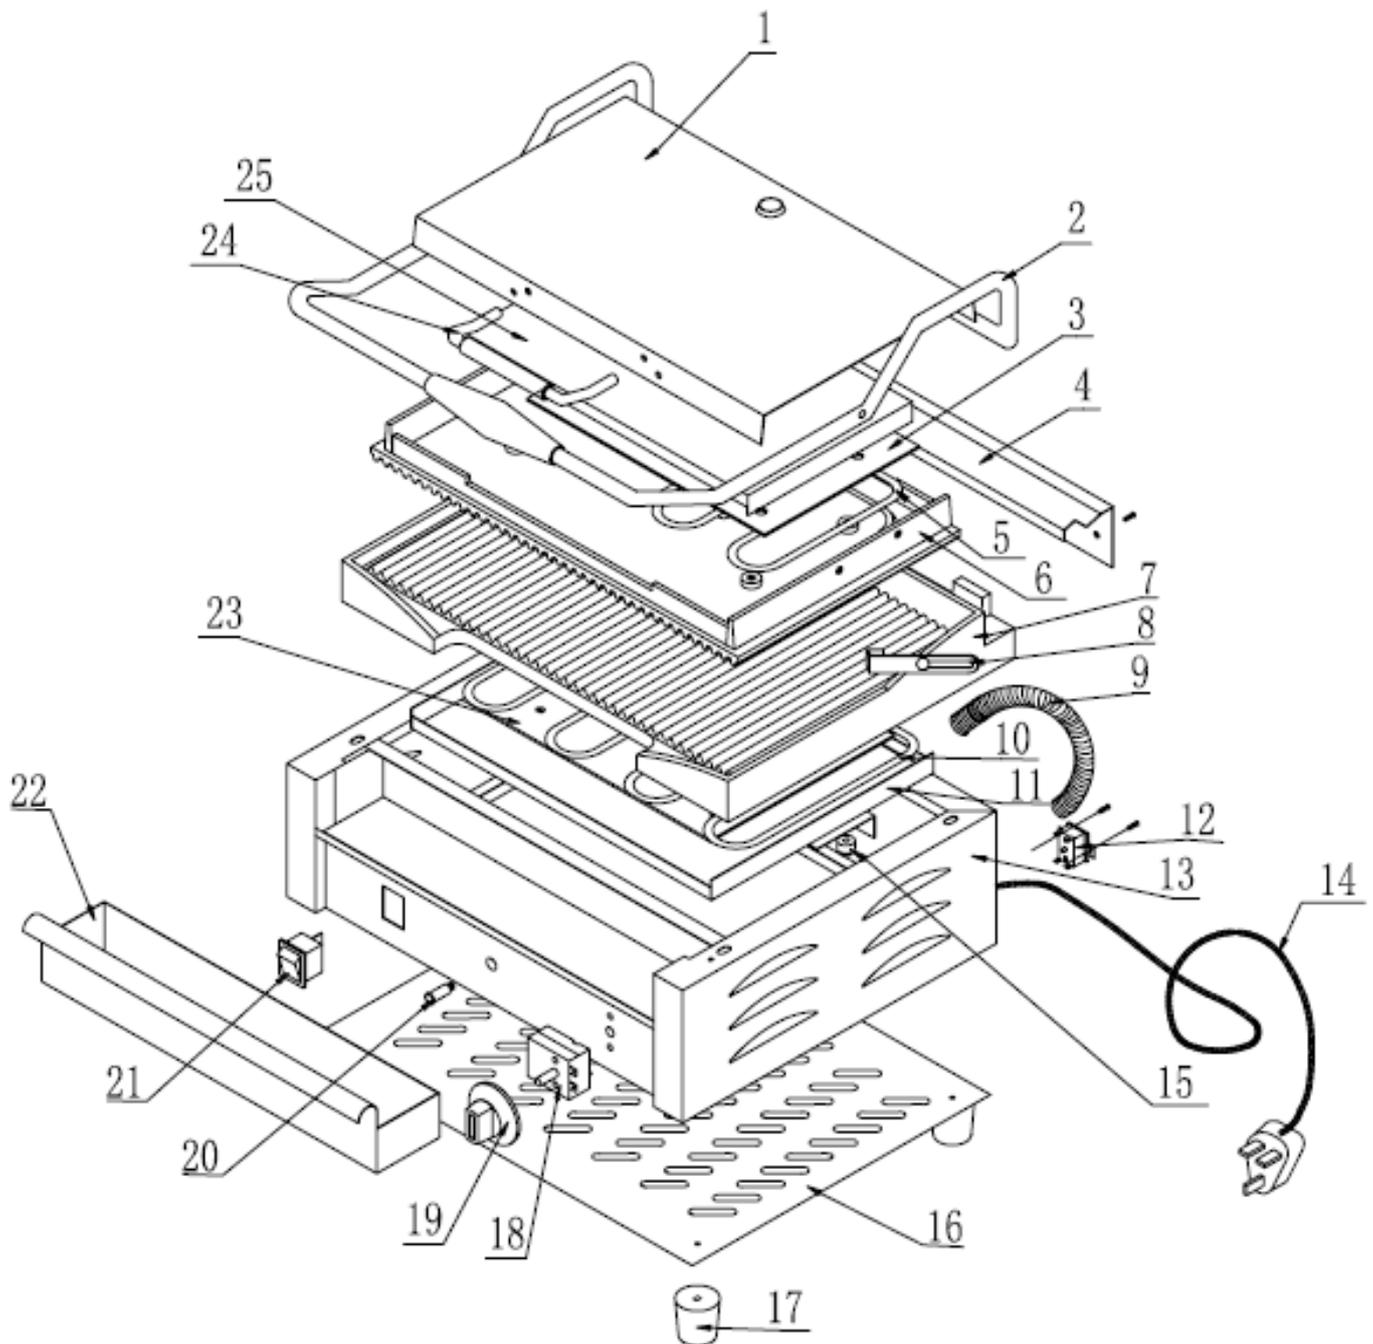

Machine	Explode	Code	Description
L518 L519 & L530 – Large Contact Grill	1		Top Cover
L518 L519 & L530 – Large Contact Grill	2	N482	main Handle
L518 L519 & L530 – Large Contact Grill	3		Mica Plate Upper
L518 L519 & L530 – Large Contact Grill	4		Rear Spring
L518 L519 & L530 – Large Contact Grill	5	N154	Heating Element Upper
L518 L519 & L530 – Large Contact Grill	6		Cast Plate Upper
L518 L519 & L530 – Large Contact Grill	7		Cast Plate Lower
L518 L519 & L530 – Large Contact Grill	8		Hinge
L518 L519 & L530 – Large Contact Grill	9	N480	Plate Connecting Spring
L518 L519 & L530 – Large Contact Grill	10	N155	Heating Element Lower
L518 L519 & L530 – Large Contact Grill	11		Insulation Plate Lower
L518 L519 & L530 – Large Contact Grill	12	N126	Thermal Cut Out
L518 L519 & L530 – Large Contact Grill	13		Main Body
L518 L519 & L530 – Large Contact Grill	14	N150	Plug & Lead
L518 L519 & L530 – Large Contact Grill	15		Ceramic Tube
L518 L519 & L530 – Large Contact Grill	16		Base Plate
L518 L519 & L530 – Large Contact Grill	17		Feet
L518 L519 & L530 – Large Contact Grill	18	N125	Thermostat
L518 L519 & L530 – Large Contact Grill	19	N129	Dial
L518 L519 & L530 – Large Contact Grill	20	N486	Indicator Light
L518 L519 & L530 – Large Contact Grill	21	N146	Switch
L518 L519 & L530 – Large Contact Grill	22	N478	Drip Tray
L518 L519 & L530 – Large Contact Grill	23		Mica Plate Lower
L518 L519 & L530 – Large Contact Grill	24	N484	Small Handle
L518 L519 & L530 – Large Contact Grill	25		Insulation Plate Upper