



4-Slot/6-Slot Toaster

Instruction manual



Model CB432 & CB433

SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING THE TOASTER KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

- **B**READ MAY BURN. THEREFORE TOASTERS MUST NOT BE USED NEAR OR BELOW CURTAINS AND OTHER COMBUSTIBLE MATERIALS.
- **T**HIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- **T**HIS APPLIANCE CAN BE USED BY CHILDREN AGE FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN UNLESS THEY ARE OLDER THAN 8 AND SUPERVISED. KEEP THE APPLIANCE AND ITS CORD OUT OF REACH OF CHILDREN LESS THAN 8 YEARS.
- **C**HILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THIS APPLIANCE.
- **D**O NOT USE OUTDOORS.

- **T**HE TOASTER IS NOT INTENDED TO BE OPERATED BY MEANS OF AN EXTERNAL TIMER OR SEPARATE REMOTE-CONTROL SYSTEM.
- **D**O NOT OPERATE ANY APPLIANCE WITH A DAMAGED LEAD OR PLUG, OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.
- **T**HIS SYMBOL DENOTES ACCESSIBLE SURFACES OF THE TOASTER SEE MAY GET HOT DURING USE.



- **WARNING:** This appliance must be earthed.
- We recommend that the toaster is plugged into a socket that has no other appliance connected to it. Failure to do this may cause an overload, trip a circuit breaker or blow a fuse. Preferably the socket outlet should be protected by a Residual Current device (RCD)
- Before plugging in, check that the voltage on the rating label is the same as the mains supply.
- To protect against electric shock, do not immerse any part of this product in water or other liquid.
- Do not allow cable to touch hot surfaces, or to hang over edge of a table or counter top.
- Keep clear of flammable material. When in use a fire may occur if the toaster is covered or touching flammable material.
- Do not attempt to dislodge bread when the toaster is plugged in.
- Toasters must not be used near or below curtains and other combustible materials.
- When toasting do not leave appliance unattended.
THIS IS AN ATTENDED APPLIANCE
- **NOTE:** Any plug cut from power supply cord should be disposed of immediately. Inserting any cut off Plug into a 13A socket-outlet is hazardous.

- Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same rating as original.
- Replacement fuses should be ASTA approved to BS 1362.

- Position the appliance on a flat, stable surface.
- A service agent/qualified technician should carry out installation and any repairs if required.
- Consult Local and National Standards to comply with the following:
 - Health and Safety at Work Legislation
 - BS EN Codes of Practice
 - Fire Precautions
 - IEE Wiring Regulations
 - Building Regulations
- DO NOT touch the top and sides of the appliance when in use. Surfaces are hot!
- DO NOT obstruct or cover the appliance in any way when in use.
- DO NOT insert any metallic objects in to the appliance when connected to a power supply.
- Always switch off the appliance, disconnect the power supply and allow to cool before cleaning or carrying out maintenance.
- Always switch off and disconnect the power supply to the appliance when not in use.
- Keep all packaging away from children. Dispose of the packaging in accordance to the regulations of local authorities.

SAVE THESE INSTRUCTIONS

Introduction

Please take a few moments to carefully read through this manual. Correct maintenance and operation of this machine will provide the best possible performance from your BUFFALO product.

Pack Contents

The following is included:

- BUFFALO 4-Slot or 6-Slot Toaster
- Instruction Manual

BUFFALO prides itself on quality and service, ensuring that at the time of packaging the contents are supplied fully functional and free of damage. Should you find any damage as a result of transit, please contact your BUFFALO dealer immediately.

Operation

1. Connect the appliance to a mains power supply
2. Insert the bread into the top of the appliance
3. Select the number of pieces of bread to toast using the Slot Selection Switch - Note Left 2 Slots are for 2 slice toasting, Left 4 slots for 4 slot toasting
4. Pull the lever up to lower bread into appliance
5. Turn timer to desired setting (Rotate a minimum of 90° past the '1' symbol or spring tension will not engage or turn off the toaster.)
6. The appliance will begin toasting
7. When timer reaches Off position appliance will stop toasting - Note to switch toaster off manually turn timer to Off
8. Push lever down to raise toast

Cleaning, Care & Maintenance

- **A** BUFFALO DEALER OR QUALIFIED TECHNICIAN SHOULD CARRY OUT REPAIRS IF REQUIRED.
- **A**LWAYS SWITCH OFF THE APPLIANCE, DISCONNECT THE POWER SUPPLY AND ALLOW TO COOL BEFORE CLEANING OR PERFORMING MAINTENANCE.
- **I**F NECESSARY WIPE THE EXTERIOR WITH A SOFT CLOTH AND WARM SOAPY WATER.
- **D**RY THOROUGHLY AFTER CLEANING.

Crumb Tray

PERIODICALLY EMPTY THE CRUMB TRAY (LOCATED AT THE BOTTOM OF THE APPLIANCE). SLIDE THE TRAY OUT TO EMPTY. SLOT BACK IN SECURELY WHEN REPLACING THE TRAY.

Troubleshooting

If your BUFFALO appliance develops a fault, please check the following table before making a call to the Helpline.

Fault	Probable Cause	Action
The appliance is not working	The appliance is not switched on	Check the appliance is plugged in correctly and switched on
	Plug and lead are damaged	Call BUFFALO agent or qualified technician
	Fuse in the plug has blown	Replace the plug fuse
	Power supply	Check power supply
	Internal wiring fault	Call BUFFALO agent or qualified technician
	Element has expired	Call BUFFALO agent or qualified technician

Electrical Wiring

This appliance is supplied with a 3 pin, moulded, BS1363 plug and lead, with a 13 amp fuse as standard.

The plug is to be connected to a suitable mains socket.

This appliance is wired as follows:

- Live wire (coloured brown) to terminal marked L
- Neutral wire (coloured blue) to terminal marked N
- Earth wire (coloured green/yellow) to terminal marked E

This appliance must be earthed, using a dedicated earthing circuit.

If in doubt consult a qualified electrician.

Electrical isolation points must be kept clear of any obstructions. In the event of any emergency disconnection being required they must be readily accessible.

Compliance

The WEEE logo on this product or its documentation indicates that the product must not be disposed of as household waste. To help prevent possible harm to human health and/or the environment, the product must be disposed of in an approved and environmentally safe recycling process. For further information on how to dispose of this product correctly, contact the product supplier, or the local authority responsible for waste disposal in your area. BUFFALO parts have undergone strict product testing in order to comply with regulatory standards and specifications set by international, independent, and federal authorities.

BUFFALO products have been approved to carry the Adjacent symbol:



All rights reserved. No part of these instructions may be produced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of BUFFALO.