



**Chefmaster 7ltr Mixer
Instruction Manual**

Model

HEF574 – 7ltr Tabletop Mixer

Thank you for purchasing your Chefmaster Mixer. To make full use of the product please read this manual carefully before using the product and keep it safe for future reference.

Safety Tips

- If you find any damage when the product is unpacked, contact your Chefmaster supplier within 24 hours of receipt of goods
- Repairs should always be carried out by a qualified technician
- Do not remove food debris from the product until the mixer has come to a complete stop
- Do not use this product outside
- Do not use any extra devices/accessories that are not supplied along with the appliance
- Do not insert anything into the rotating hooks whilst the mixer is in use
- Always switch off and unplug the unit before cleaning
- If the power cord becomes damaged it must be replaced by a qualified technician
- This product is not designed to be used by persons with reduced physical or mental capabilities, lack of experience or knowledge, unless they are given suitable supervision, this includes children

Pack Contents

- 1 x Chefmaster Mixer
- 1 x Dough Hook
- 1 x Beater
- 1 x Balloon Whisk
- 1 x Splash Guard



Before Use

- Remove all packaging including all protective plastic, from your Chefmaster Mixer
- Clean the Mixer with soft damp cloth only
- Clean the accessories with soapy warm water & rinse

Operation

- Position the Mixer on flat surface
- Loosen the locking handle & raise the mixer head
- Place the mixing bowl into the housing and twist until it locks in place
- Fix the splash guard to mixer head until it clicks
- Attach the desired accessory into the drive shaft and twisting counterclockwise to lock in place
- After adding ingredients into the bowl, lower the mixer head and rotate the locking handle to secure it
- Plug into the mains, then switch on the product and select the required mixing speed with the dial
- Switch off the product & disconnect from mains after use

	Hook – for mixtures incorporate with cream, egg whites etc.	Beater – for normal to heavy batters	Whisk – for mixing & kneading yeast doughs
Min. amount:	<u>Dry flour</u> 250g <u>Water</u> 180g	<u>Cookies/ Fillings</u> 350g	<u>Cream</u> 0.3L <u>Egg White</u> 2 PCS
Max. amount:	800g 480g	1000g	1.3L 25 PCS
Speed range:	1 - 4	1-8	1-11

PLEASE NOTE: Do not overfill the machine, as this may cause damage to machine, and invalid the warranty.

Cleaning & Maintenance

- Before cleaning disconnect the Mixer from electricity supply
- Only clean the Mixer with damp cloth. DO NOT submerge the Mixer in water or use water sprays to clean it
- The accessories can be cleaned with warm soapy water or a dish washer.
- Dry the product thoroughly and keep it in a dry place.
- Always clean your Chefmaster Mixer daily

- The maximum amount of bread dough made should not exceed 2kg at any one time.

Troubleshooting

Fault	Possible Cause	Solution
The unit is plugged in but not working	The plug or lead are damaged	Contact your Chefmaster distributor
	The fuse has blown	Replace the fuse
	Safety switch is triggered	Turn off the unit. Make sure the mixing head is locked in place then Turn on again
The mixing bowl wobbles	The mixing bowl is not locked into place	Twist the mixing bowl until it is locked in place
The unit stops running during operation	The plug / lead / fuse are damaged	Contact your Chefmaster distributor / Replace the fuse
Rotation speed decreases	Overloaded	Reduce batch size
	Incorrect agitator attached	Refer to section "Operation"

Transportation and Storage

Please handle your mixer with care to prevent any damage to the unit and internal parts. The mixer should be stored somewhere which is ventilation and non-corrosive gas.

Do not store any flammable objects near the equipment.

Technical Information

HEF574 – 7ltr Tabletop Mixer

Voltage 220V-240V, 50/60Hz

Power 350watt

Rotation speed 100 -938 r/ min

Weight 15kg

Dimensions 403 x 236 x 438 mm

- Chefmaster Mixers are supplied with a 3-pin plug and lead with a 13 amp fuse
- Appliance must be earthed.
- If in doubt, contact a qualified electrician or your Chefmaster distributor

Disposal



Under WEEE regulations this product must not be disposed of as household waste. To prevent damage to the environment and humans this product must be disposed of in an approved and environmentally friendly recycling process. For more information on how to dispose of this correctly please contact your Chefmaster distributor or local authority responsible for waste disposal.

Compliance



All Chefmaster parts and products have undergone a stringent testing process to ensure that comply with all European standards and specifications. All Chefmaster products carry the CE approval symbol.