

1. INSTRUCTIONS FOR USE	26
2. SAFETY PRECAUTIONS	28
3. ENVIRONMENTAL CARE	30
4. DESCRIPTION OF CONTROLS.....	31
5. USING THE OVEN	32
6. CLEANING AND MAINTENANCE	40
7. EXTRAORDINARY MAINTENANCE	43
8. OVEN INSTALLATION	44

THESE INSTRUCTIONS ARE VALID ONLY FOR THE DESTINATION COUNTRIES WHOSE IDENTIFYING SYMBOLS ARE INCLUDED ON THE COVER OF THIS MANUAL.



INSTRUCTIONS FOR THE USER: these instructions contain user recommendations, a description of the controls and the correct procedures for cleaning and maintenance of the appliance.



INSTRUCTIONS FOR THE INSTALLER: these are intended for the qualified technician who must install the appliance, set it functioning and carry out an inspection test.



1. INSTRUCTIONS FOR USE



THIS MANUAL IS AN INTEGRAL PART OF THE APPLIANCE. IT MUST BE KEPT IN ITS ENTIRETY AND IN AN ACCESSIBLE PLACE FOR THE WHOLE WORKING LIFE OF THE APPLIANCE.

CAREFUL READING OF THIS MANUAL AND ALL THE INSTRUCTIONS THEREIN BEFORE USING THE APPLIANCE IS ESSENTIAL. INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE. THIS APPLIANCE IS INTENDED FOR PROFESSIONAL USE AND CONFORMS TO THE EEC DIRECTIVES CURRENTLY IN FORCE. THE APPLIANCE HAS BEEN BUILT TO CARRY OUT THE FOLLOWING FUNCTION: COOKING FOOD; ALL OTHER USES ARE CONSIDERED UNSUITABLE.

THE MANUFACTURER CANNOT BE HELD LIABLE FOR USES OTHER THAN THOSE INDICATED.



IF THE APPLIANCE IS INSTALLED ON BOATS OR IN CARAVANS, DO NOT USE IT AS A ROOM HEATER.



DO NOT USE THIS APPLIANCE FOR HEATING ROOMS.



THIS APPLIANCE IS MARKED ACCORDING TO EUROPEAN DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE).

THIS DIRECTIVE DEFINES THE STANDARDS FOR THE COLLECTION AND RECYCLING OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT APPLICABLE THROUGHOUT THE EUROPEAN UNION.



NEVER OBSTRUCT THE OPENINGS AND SLITS PROVIDED FOR VENTILATION AND HEAT DISPERSAL.



DO NOT REST ANY WEIGHT OR SIT ON THE OPEN DOOR OF THE APPLIANCE.



THE IDENTIFICATION PLATE WITH THE TECHNICAL DATA, SERIAL NUMBER AND BRAND NAME HAS BEEN VISIBLY AFFIXED TO THE APPLIANCE.

DO NOT REMOVE THIS PLATE FOR ANY REASON.



BEFORE THE APPLIANCE IS PUT INTO OPERATION, ALL THE PROTECTIVE FILMS APPLIED INSIDE OR OUTSIDE MUST BE REMOVED.



TAKE CARE THAT NO OBJECTS ARE STUCK IN THE DOOR OF THE OVEN.



THE APPLIANCE BECOMES VERY HOT INSIDE DURING USE. SUITABLE HEAT-PROOF GLOVES SHOULD BE WORN FOR ALL OPERATIONS.



General instructions

GB-IE



TRAYS MUST BE WASHED BEFORE USE WITH A SUITABLE KITCHENWARE DETERGENT (DO NOT USE ABRASIVE PRODUCTS).



THE OVEN IS DESIGNED FOR A MAXIMUM LOAD OF 3.5 KG.



DO NOT USE STEEL SPONGES AND SHARP SCRAPERS AS THEY WILL DAMAGE THE SURFACE.

USE NORMAL NON-ABRASIVE PRODUCTS, INCLUDING WOODEN OR PLASTIC UTENSILS IF NECESSARY. RINSE THOROUGHLY AND DRY USING A SOFT CLOTH OR A MICROFIBRE CLOTH.

DO NOT ALLOW RESIDUES OF SUGARY FOODS (SUCH AS JAM) TO SET INSIDE THE OVEN. IF THEY ARE ALLOWED TO SET FOR TOO LONG, THEY COULD RUIN THE SURFACES OF THE OVEN.



DO NOT USE PLASTIC KITCHENWARE OR CONTAINERS. THE HIGH TEMPERATURES INSIDE THE OVEN COULD MELT THE PLASTIC, DAMAGING THE APPLIANCE.



DO NOT USE SEALED TINS OR CONTAINERS IN THE APPLIANCE. OVERPRESSURE MAY OCCUR INSIDE THE CONTAINERS DURING COOKING, CREATING A DANGER OF EXPLOSION.



DO NOT LEAVE THE APPLIANCE UNATTENDED DURING COOKING OPERATIONS WHERE FATS OR OILS COULD BE RELEASED.

FATS AND OILS MAY CATCH FIRE.



DO NOT COVER THE BOTTOM OF THE OVEN WITH ALUMINIUM OR TINFOIL SHEETS DURING COOKING AND DO NOT PLACE PANS OR TRAYS ON IT TO AVOID DAMAGE TO THE SURFACE.



ALL COOKING OPERATIONS MUST TAKE PLACE WITH THE DOOR CLOSED.



2. SAFETY PRECAUTIONS

CONSULT THE INSTALLATION INSTRUCTIONS FOR SAFETY STANDARDS ON ELECTRICAL OR GAS APPLIANCES AND FOR VENTILATION FUNCTIONS.

IN YOUR INTERESTS AND FOR YOUR SAFETY THE LAW REQUIRES THAT THE INSTALLATION AND SERVICING OF ALL HOUSEHOLD APPLIANCES IS CARRIED OUT BY QUALIFIED PERSONNEL IN ACCORDANCE WITH THE REGULATIONS IN FORCE.

OUR APPROVED INSTALLERS GUARANTEE A SATISFACTORY JOB.

GAS OR ELECTRICAL APPLIANCES MUST ALWAYS BE DISCONNECTED BY SUITABLY SKILLED PEOPLE.



BEFORE CONNECTING THE APPLIANCE TO THE POWER GRID, CHECK THE DATA ON THE PLATE AGAINST THE DATA FOR THE GRID ITSELF.



BEFORE CARRYING OUT INSTALLATION/MAINTENANCE WORK, MAKE SURE THAT THE APPLIANCE IS NOT CONNECTED TO THE POWER GRID.



THE PLUG TO BE CONNECTED TO THE POWER SUPPLY CABLE AND ITS SOCKET MUST BE OF THE SAME TYPE AND CONFORM TO THE REGULATIONS IN FORCE. THE SOCKET MUST BE ACCESSIBLE AFTER THE APPLIANCE HAS BEEN BUILT IN. NEVER UNPLUG BY PULLING ON THE CABLE.



IF THE POWER CABLE IS DAMAGED, REPLACE IT IMMEDIATELY.



THE APPLIANCE MUST BE CONNECTED TO EARTH IN COMPLIANCE WITH ELECTRICAL SYSTEM SAFETY REGULATIONS.



IMMEDIATELY AFTER INSTALLATION, CARRY OUT A BRIEF INSPECTION TEST, FOLLOWING THE INSTRUCTIONS BELOW. SHOULD THE APPLIANCE NOT FUNCTION, DISCONNECT IT FROM THE POWER SUPPLY AND CALL THE NEAREST TECHNICAL ASSISTANCE CENTRE. NEVER ATTEMPT TO REPAIR THE APPLIANCE.



NEVER PUT INFLAMMABLE OBJECTS IN THE OVEN: IF IT IS SWITCHED ON BY ACCIDENT, IT MAY CAUSE A FIRE.



DURING USE THE APPLIANCE BECOMES VERY HOT. TAKE CARE NOT TO TOUCH THE HEATING ELEMENTS INSIDE THE OVEN.



THE USE OF THIS APPLIANCE IS NOT PERMITTED TO PEOPLE (INCLUDING CHILDREN) OF REDUCED PHYSICAL AND MENTAL ABILITY, OR LACKING IN EXPERIENCE IN THE USE OF ELECTRICAL APPLIANCES, UNLESS THEY ARE SUPERVISED OR INSTRUCTED BY ADULTS OR PEOPLE RESPONSIBLE FOR THEIR SAFETY.



General instructions

GB-IE



THE APPLIANCE IS DESIGNED FOR PROFESSIONAL USE BY TRAINED PERSONS. DO NOT LET CHILDREN GO NEAR THE APPLIANCE WHEN IT IS IN OPERATION OR PLAY WITH IT AT ANY TIME.



DO NOT INSERT POINTED METAL OBJECTS (CUTLERY OR UTENSILS) INTO THE SLITS IN THE APPLIANCE.



DO NOT USE STEAM JETS FOR CLEANING THE APPLIANCE. THE STEAM COULD REACH THE ELECTRONICS, DAMAGING THEM AND CAUSING SHORT-CIRCUITS.



DO NOT MODIFY THIS APPLIANCE.



DO NOT SPRAY ANY SPRAY PRODUCTS NEAR THE ELECTRICAL APPLIANCE WHILE IT IS IN OPERATION.
DO NOT USE SPRAY PRODUCTS WHILE THE PRODUCT IS STILL HOT.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance or by the use of non-original spare parts.



3. ENVIRONMENTAL CARE

3.1 Our environmental care



Pursuant to Directives 2002/95/EC, 2002/96/EC and 2003/108/EC relating to the reduction of the use of hazardous substances in electrical and electronic appliances, as well as to the disposal of refuse, the crossed out bin symbol on the appliance indicates that the product, at the end of its useful life, must be collected separately from other refuse. Therefore, the user must consign the product that has reached the end of its working life to the appropriate selective collection centres for electrical and electronic refuse, or deliver it back to the retailer when purchasing an equivalent product, on a one for one basis. Adequate selective collection for the subsequent forwarding of the decommissioned product to recycling, treatment and ecologically compatible disposal contributes to avoiding possible negative effects on the environment and on health and promotes the recycling of the materials of which the appliance consists. The illicit disposal of the product by the user results in the application of administrative sanctions.

The product does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

3.2 Your environmental care

Our product's packaging is made of non-polluting materials, therefore compatible with the environment and recyclable. Please help by disposing of the packaging correctly. You can obtain the addresses of collection, recycling and disposal centres from your retailer or from the competent local organisations.



Do not discard the packaging or any part of it, or leave it unattended. It can constitute a suffocation hazard for children, especially the plastic bags.


Your old appliance also needs to be disposed of correctly.

Important: hand over your appliance to the local agency authorised for the collection of household appliances no longer in use. Correct disposal enables intelligent recovery of valuable materials.

Before disposing of your appliance it is important to remove doors and leave shelves in the same position as for use, to ensure that children cannot accidentally become trapped inside during play. It is also necessary to cut the connecting cable to the power grid, removing it along with the plug.



4. DESCRIPTION OF CONTROLS

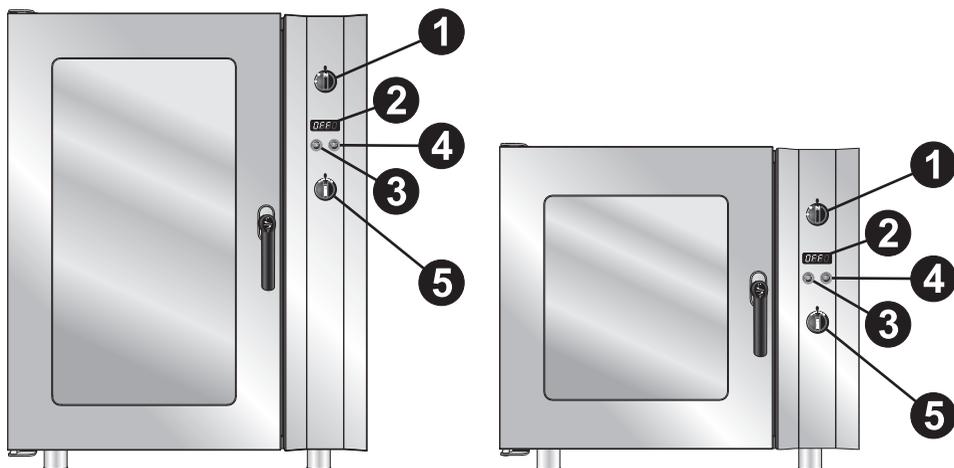

1

STEAM DISCHARGE KNOB

This two-position knob allows to eliminate during cooking the steam that is produced after cooking food. The discharge settings range from 0 to 1 and all the intermediate zones can be used.



2

DISPLAY

Displays the selected program and related cooking parameters, as well as the operating power.



3

START BUTTON

This button allows you to start cooking operations or perform a rapid cooling cycle when they are finished.
In the steam mode it starts the manual humidification cycle.



4

STOP BUTTON

This button allows you to stop cooking at any time.



5

PROGRAM SELECTION KNOB

Allows you to set the cooking operation using one of the preset programs, to select the temperature and duration of the cooking operation as well as the operating power.





5. USING THE OVEN



THE **ALFA341** OVEN IS DESIGNED FOR A MAXIMUM LOAD OF **25 KG**.



THE **ALFA241** OVEN IS DESIGNED FOR A MAXIMUM LOAD OF **12 KG**.



5.1 General warnings and advice



- When using the oven for the first time, heat it up to a temperature of 200°C for a duration long enough to burn off any oily residues from the manufacturing process.
- As the oven door is opened, the heating elements and the fan are deactivated.
- To access food, always leave the door open as short a time as possible to prevent the temperature in the oven from falling and ruining the food.

To prevent any steam in the oven from creating problems, the oven door has been equipped with a two-stage opening device:

- 1 turn the handle completely to the left and pull;
- 2 then turn it to the right to fully open the door.

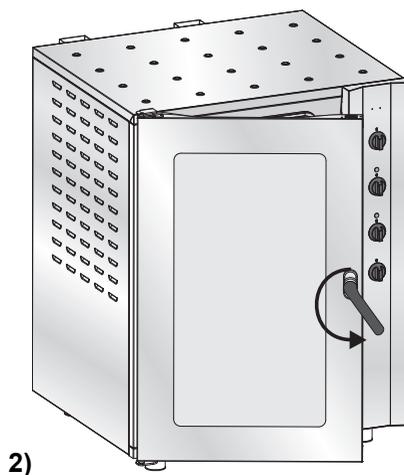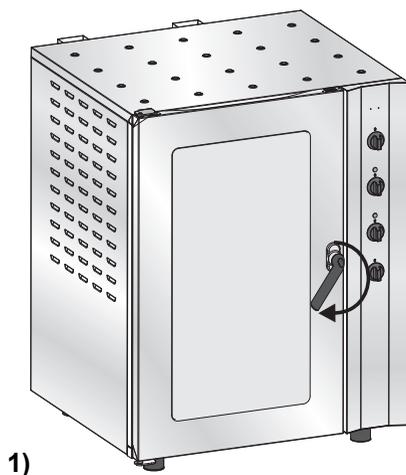



5.2 Setting the power

When connecting the oven for the first time, the maximum power absorbed will appear **flashing** on the display. If the product is already connected, this will be in the “**OFF**” status. In both cases proceed as follows:

ALFA341

- Turn the knob towards the symbol **+** or **-** to select the maximum power absorbed by the oven between **P15** (15 kW) and **P9** (9 kW).
- Once you have selected the power, press the “**PUSH**” knob to confirm the selection.

ALFA241

- Turn the knob towards the symbol **+** or **-** to select the maximum power absorbed by the oven between **P8.3** (8.3 kW) and **P5.5** (5.5 kW).
- Once you have selected the power, press the “**PUSH**” knob to confirm the selection.



The power setting operation must be performed the first time that the oven is connected.

The value set is stored and used automatically whenever the oven is used subsequently.

If the product is already connected and you want to modify the absorbed power setting, from “**OFF**” status, hold down the “**PUSH**” knob for at least 3 seconds.

5.3 Choice of programs

This appliance allows you to select **40** cooking programs including:

- 38 programs that can be edited and saved as the user wishes;
- 1 preheating program with delayed start “**P39**”;
- 1 manual program “**P40**”.




5.4 Humidified cooking (on some models only)

The **humidified** programs that the user can modify are included between **P01** and **P40** apart from program **P39**. 3 different humidity levels can be set for each program: **H1** (low), **H2** (medium) and **H3** (high). Each set level has different intervals between the steam injection cycles: 8' pause for H1, 5' for H2 and 2' for H3. Humidification cycles can be set and modified only if an oven temperature higher than 110°C is selected.

The oven chamber can be humidified during cooking by controlling the relevant inlet valve: To do this, just keep the “**START**” button pressed for at least one second. Releasing the button stops the water from flowing in.

The diagram below represents the humidification cycle.

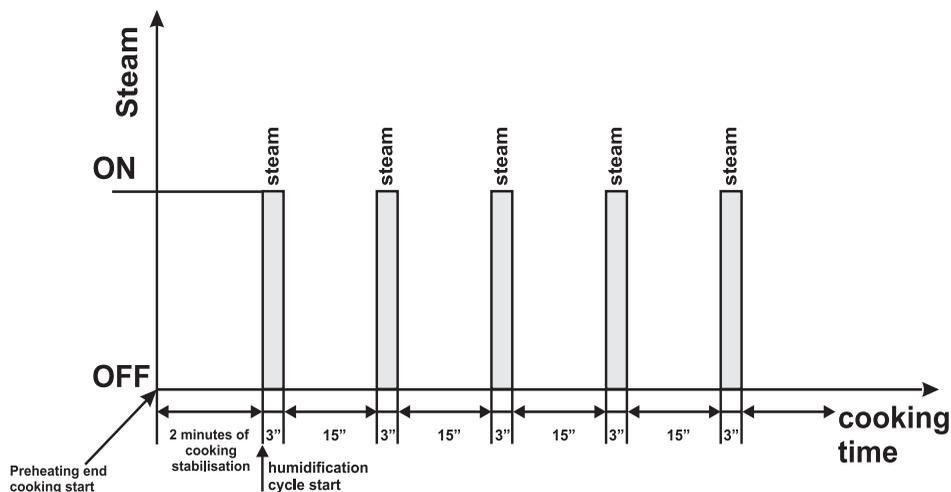

WARNING: the humidification cycle begins 2 minutes after cooking starts to allow complete stabilisation of the oven temperature.



5.5 Editing / saving a program

The oven has 38 programs that can be modified by the user (from **P01** to **P38**). To set the operating parameters of a program:

- 1 Turn the knob to the **+** or **-** symbol to select the program you wish to save / edit.
- 2 Keep the **"PUSH"** knob pressed for 3 seconds: the display will show the cooking temperature.
- 3 Turn the knob to the **+** or **-** symbol to set the cooking temperature.
- 4 Press the **"PUSH"** knob: the display will show the cooking time.
- 5 Turn the knob to the **+** or **-** symbol to set the cooking time (from 1 to 99 min).
- 6 Press the **"PUSH"** knob: the display will show the level of oven humidification (humidified models only).
- 7 Turn the knob to the **+** or **-** symbol to set the level of humidification H0, H1, H2 or H3. Set H0 if oven humidification is not required.



If the temperature is set below 110°C, no oven humidification level can be set.

- 8 Press the **"PUSH"** knob to exit from the data setting and saving phase. The message **"PEnd"** will appear on the display and the parameters will be saved.
- 9 After 3 seconds the display will show the parameters set in rotation.
- 10 To return to the **"OFF"** status keep the **"STOP"** button pressed for 4 seconds.



5.6 Running a program

From the “**OFF**” status proceed as follows:

- 1 Turn the knob to the **+** or **-** symbol to select one of the available programs from **P01** to **P38**. The display will show the parameters of the selected program in rotation. To start the program press the “**START**” button. The appliance will perform a preheating cycle, showing the text “**PrEh**” on the display.
- 2 When preheating is finished, a series of beeps lasting 3 seconds will indicate that it is possible to proceed with the cooking operation. The text “**PrEh**” will flash on the display.
- 3 To start cooking, keep the “**START**” button pressed for 2 seconds. The display will show the set parameters in sequence, with the time remaining until the end of cooking and the program selected.
- 4 It is possible to start cooking early before the preheating temperature is reached, by keeping the “**START**” button pressed for 3 seconds.
- 5 During the last minute of cooking, only the countdown of the remaining 60 seconds will be displayed. At the end, a beep and the text “**End**” flashing (for 20 minutes) will indicate that cooking has been completed.
- 6 To return to the “**OFF**” status keep the “**STOP**” button pressed for 4 seconds.



During cooking, if it is necessary to open the oven door, the display shows the message “**door**” together with a continuous acoustic signal. When the door is closed the oven will continue cooking.



5.6.1 Extending a cooking operation

When a cooking operation finishes, it is possible to extend it manually:

- 1 While the display is showing the text “**End**”, press the “**START**” button; the text “**tP00**” will appear on the display.
- 2 Turn the knob to the  or  symbol to set the additional minutes of cooking; at most 20 extra minutes are allowed.
- 3 To start cooking with the extra time that has just been set, press the “**START**” button for at least 2 seconds.
- 4 At the end of cooking, the text “**End**” will continue to flash for the next 20 minutes and the oven light will remain on.

5.6.2 Modifying a program during cooking

The program can be modified during cooking:

- 1 Press the “**PUSH**” knob: the display will show the cooking temperature.
- 2 Modify the settings as described in points 3 - 10 of paragraph “5.5 Editing / saving a program”.



Changes made to the program during cooking are not saved.

- 3 3 seconds after the last change, the program automatically quits the modification status and saves the settings (as described in this paragraph, the modified parameters are saved solely until the end of cooking).



5.7 Manual cooking

The manual program is “**P40**” and can be edited by the user, but does not save the cooking parameters. To select this program proceed as follows:

- Save the program temporarily, as described in paragraph “5.5 Editing / saving a program”. Unlike saved programs, the cooking time can be set to infinite; the display will show the text “**InF**”.
- After saving it, do NOT return to the “**OFF**” status. Press the “**START**” button. The appliance will perform a preheating cycle, showing the text “**PrEh**” on the display.
- When preheating is finished, a series of beeps lasting 3 seconds will indicate that it is possible to proceed with the cooking operation. The text “**PrEh**” will flash on the display.
- To start cooking, keep the “**START**” button pressed for 2 seconds. The display will show the set cooking parameters in sequence.
- It is possible to start cooking early before the preheating temperature is reached, by keeping the “**START**” button pressed for 3 seconds.
- The operating parameters can be modified during cooking as indicated in paragraph “5.6.2 Modifying a program during cooking”.
- During the last minute of cooking, only the countdown of the remaining 60 seconds will be displayed. At the end, a beep and the text “**End**” flashing (for 20 minutes) will indicate that cooking has been completed.
- At the end of the cooking operation, to perform the same program again press the “**START**” button once more.
- To return to the “**OFF**” status keep the “**STOP**” button pressed for 4 seconds. The parameters set for the program are deleted.



5.8 Preheating with delayed start

- Turn the knob to the **+** or **-** symbol to select the program “**P39**”.
- Press the “**PUSH**” button for at least 3 seconds; the display shows the current time flashing.
- Turn the knob to the **+** or **-** symbol to set the current time.
- Press the “**PUSH**” button; the display will show the minutes flashing.
- Turn the knob to the **+** or **-** symbol to set the minutes.
- Press the “**PUSH**” button; the display will show the temperature flashing.
- Turn the knob to the **+** or **-** symbol to set the temperature.
- Press the “**PUSH**” button; the display will show the cooking start time flashing.
- Turn the knob to the **+** or **-** symbol to set the cooking start time.
- Press the “**PUSH**” button; the display will show the minutes flashing.
- Turn the knob to the **+** or **-** symbol to set the minutes.
- Press the “**PUSH**” button to exit from the data setting and saving phase. The text “**PEnd**” appears on the display and after 3 seconds it will display **P39**, the temperature and the preheating start time in succession.
- To start the program press the “**START**” button for at least 2 seconds. The display will show the current time and “**P39A**” in succession until the program is activated at the set time.



The oven will perform preheating at the set time; during this phase the display shows “**P39**”, the text “**InF**” and the set temperature in succession; this will continue until interrupted by the “**STOP**” button.

The program must be activated every day. To reactivate it set the P39 function and press the “**START**” button for at least 2 seconds.

5.9 Rapid cooling

The oven is equipped with a special function that allows the oven interior to be cooled rapidly.

To activate it, when the display shows the text “**OFF**”, open the door and press the “**START**” button for at least 4 seconds.

This will activate the internal motor fan, the heating elements are switched off and the display shows “- - - -”.

To stop the function, press the “**STOP**” button.



6. CLEANING AND MAINTENANCE

**Important:**

Do not aim jets of water directly against the oven; avoid the use of pressure jets.



Before any intervention, disconnect the power supply of the oven.

6.1 Cleaning stainless steel



To keep stainless steel in good condition it should be cleaned regularly at the end of the day. Let it cool first.

To clean and preserve the stainless steel surfaces, always use **only** specific products that do not contain abrasives or chlorine-based acids.

How to use: pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or chamois leather.

Do not use metallic sponges or sharp scrapers: they will damage the surface.

Use ordinary non-abrasive products for steel, with the aid of wooden or plastic utensils if necessary.

Rinse thoroughly and dry with a soft cloth or chamois leather.





6.2 Cleaning the door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll; in case of stubborn dirt remove with a damp sponge and an ordinary detergent.

Cleaning the oven door glazing is made extremely easier as the internal and middle glass panels can be opened. In this way, each glass panel can be cleaned both internally and externally. To open the internal glass panel move it towards the outside (figure 1) working on the points indicated in (figure 2), after having opened the internal glass panel, the middle glass panel can be opened in a similar way working on the points indicated in (figure 3).

After cleaning, to put the glass panels back into position, all you have to do is push them lightly towards the door and insert the pins into their seats.

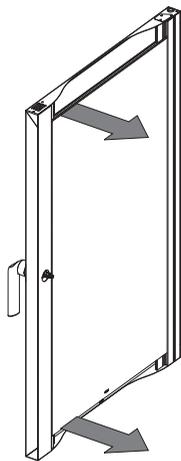


FIG. 1

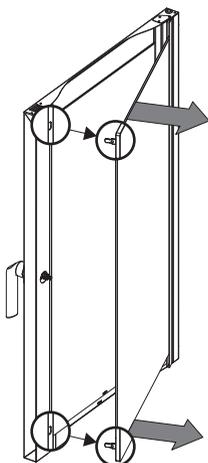


FIG. 2

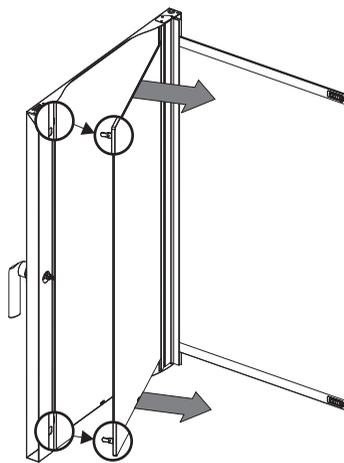


FIG. 3





6.3 Cleaning the oven interior



To keep the oven in good condition it should be cleaned regularly at the end of the day. Let it cool first. Take out all removable parts.

Remove the side guides by lifting and removing them from the support pins (as shown in the figure).

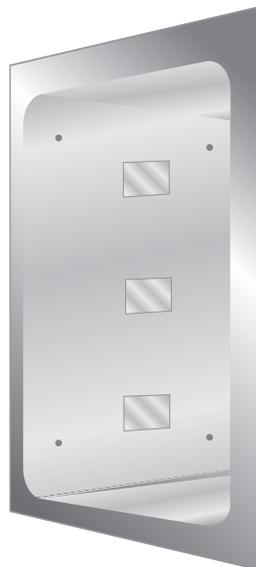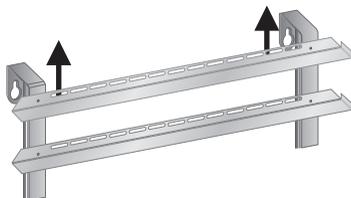

Clean the oven racks and side runners with hot water and non-abrasive detergent. Rinse and dry.



7. EXTRAORDINARY MAINTENANCE

The oven requires periodic minor maintenance or replacement of parts subject to wear, such as gaskets, light bulbs, etc.


Specific instructions for each operation of this kind are given below.



Before any intervention, disconnect the power supply of the oven.

7.1 Replacing the light bulb

Remove bulb protector **A**. Replace bulb **B** with a similar one. Re-fit bulb protector **A**.

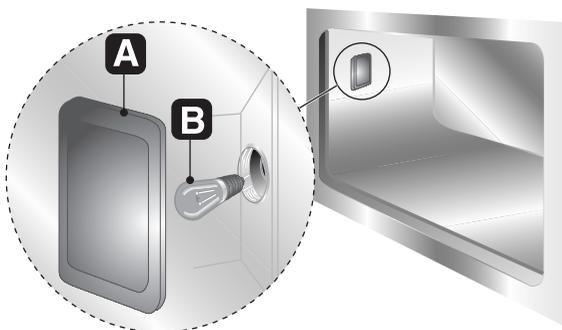

Use only oven bulbs (T 300°C).




8. OVEN INSTALLATION



The oven must be installed on a free-standing horizontal work top. The distance from the rear wall must allow easy access to the terminal board for connection of the power supply cable. Installation must be carried out by a **qualified technician** and in compliance with the EEC DIRECTIVES currently in force.

8.1 Electrical connection

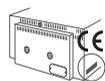


Make sure the voltage and the cross-section of the power supply line match the specifications indicated on the identification plate positioned on the side of the oven. **Do not remove this plate for any reason.**

ALFA241





For operation on 380-415V 3N~: use a H07RN-F type five-core cable (5 x 1.5 mm²).

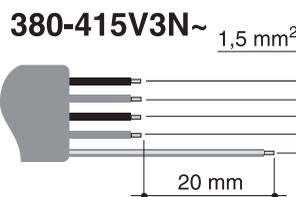

ALFA341



For operation on 380-415V 3N~: use a H07RN-F type five-core cable (5 x 4 mm²).

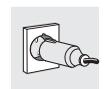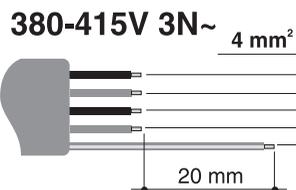

When linking up to the power supply network by plug and socket, the connection must be completed with a plug of adequate capacity. The plug and wall-mounted socket must be of the same type (in accordance with CEI regulations). Make sure that the supply line is suitably earthed. Avoid use of adapters and shunts.



If the appliance is connected to the power supply network in a permanent manner, install a multipolar cut-out device on the line, with contact opening distance equal to or greater than **3 mm** located near the appliance and in an easily reachable position.



WARNING: if the phase voltage drops below 190 VAC, the performance of the oven may suffer, not due to the product itself.




The power socket located in the rear part of the oven must be used only to supply the extraction hood. The hood is provided as an optional accessory and has a maximum absorbed power of 300W.



The terminal indicated by this symbol links up parts that are normally earthed. Connect the appliances appropriately using this terminal in order to make sure that they are equipotential.

8.1.1 How to reach the terminal board

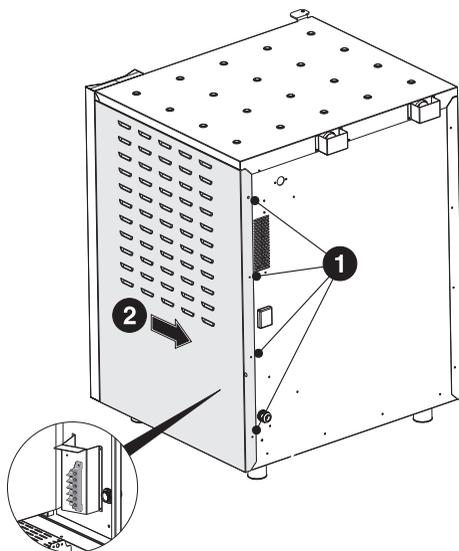

- 1 Unscrew the fixing screws at the back of the side casing.
- 2 Slide out the lateral guard as shown in the figure.

8.1.2 Safety thermostat

The oven is equipped with a safety device that triggers in case of serious malfunction. To re-arm the safety device you must contact the technical assistance service.



The manufacturer declines all responsibility for damage to persons or things caused by non-observance of the above prescriptions or by interference with any part of the appliance.



8.2 Positioning the appliance



When positioning take care not to obstruct the heat dispersal holes in the back of the appliance. The appliance must be positioned at least 80 mm away from any back wall.

8.3 Levelling




Level the oven on the ground using the four adjustable feet. In order to adjust them, loosen the lock nut and unscrew the foot. The adjustment screws have a range of 10 mm.

8.4 Plumbing connection (on the humidification model only)

Connect the water inlet socket on the back to a water socket with a threaded $\frac{3}{4}$ gas opening, taking care to screw it tightly to the hose.

If the water piping is new or has been unused for a long time, before connection, run the water to make sure it becomes clear and free of impurities. Otherwise, the water inlet may become fouled, damaging the appliance.

It is recommended to supply the oven with water pressure between: min. 50 kPa and max. 500 kPa.

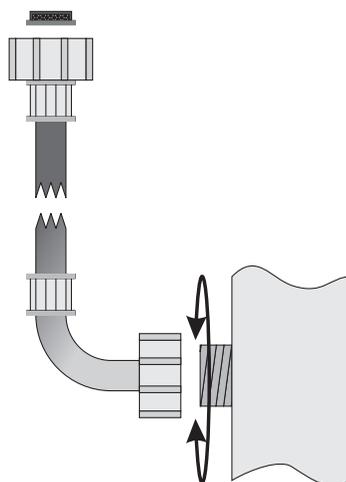

8.5 Steam outlet pipe

Depending on the model, there are two outlet pipes on the back of the oven for releasing the steam produced during cooking. These **must** be left free of any obstruction.

Avoid crushing them.

