

Marketing Department  
 Burco Appliances Ltd  
 Talbot Road  
 Mexborough  
 South Yorkshire  
 S64 8AJ

Affix  
 postage stamp  
 here

If this happens, allow the urn to cool, drain the water then press the reset button situated on the base.

In order to ensure correct operation of this cut-out it is essential to keep the urn free from scale. Failure to do this will result in the cut-out operating before the water has boiled.

## Cleaning

**WARNING Disconnect from the mains supply before cleaning and allow the urn to cool.**

**IMPORTANT** Do not immerse the urn in water or any other liquids and take care to keep water away from the mains lead and connections.

**IMPORTANT** Do not use any abrasive cleaning fluids or materials.

- 1 Wash out the urn. Use clean water and a soft cloth.
- 2 Brush any scale or sediment from inside.
- 3 Rinse thoroughly.

## Descaling

In hard water areas scale will form inside the urn. This will adversely affect the operation of the urn if allowed to accumulate. Descaling can be simply achieved by using a proprietary descaler. Choose one recommended for stainless steel kettles. It is important to follow the instructions given on the descaling solution carton.

**IMPORTANT** Failure to descale will invalidate your guarantee.

*Burco Appliances products are intended for use as detailed in these instructions.*

*Burco Appliances has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.*

## Guarantee

This appliance is guaranteed for a period of 12 months from the date of purchase against defective materials or faulty workmanship.

This guarantee is given subject to the urn being used in accordance with the instructions on the supply voltage marked on it and to the usual fair wear and tear conditions.

The guarantee does not cover consequential damage arising out of any failure acceptable under guarantee, nor does it cover damage resulting from misuse, accident or unauthorised alterations to the urn.

In any communication with the supplier or manufacturer, it is essential to quote the serial number marked on the urn.

Proof of purchase will be required.

In any communication with the service department, it is essential to quote the model and serial number marked on the base of the urn.

This guarantee, in no way diminishes the buyer's statutory rights.

Please fill in and return the tear off section to register the guarantee with Burco.

## Spare parts

Tap	62382
Thermostat	62346

# BURCO



## Electric urn



Please read and keep these instructions

## Getting the best from your urn...

### C2T urn

H315mm  
 W210mm  
 D210mm  
 2.1kg  
 SKU 444448536

### C8T urn

H530mm  
 W210mm  
 D210mm  
 2.9kg  
 SKU 444448535

- **Boil and discard the water twice before general use**
- **Any water in the urn is due to testing and is normal**
- **The urn must be used on a flat level surface**
- **Remove any plastic film from the urn before use**
- **Faults caused by failure to descale are not covered by the guarantee**



### Burco Commercial Catering Equipment

Glen Dimplex Professional Appliances  
 Stoney Lane, Prescot, Merseyside  
 L35 2XW

Tel 0871 222 5118 Fax 0871 222 9636

Email info@gdpa.co.uk

# BURCO



www.burco.co.uk

Part Number 62454 Revision 1

## Important safeguards

- To avoid being scalded when the urn is operating or has just been switched off keep hands away from any steam from the lid.
- Do not use the appliance if it has malfunctioned or has been damaged in any way.
- Do not dismantle any part of the urn. Responsibility cannot be accepted if this instruction is ignored.
- Do not place the urn on or near hot surfaces.
- Do not use accessories or attachments which are not recommended or sold by Burco Appliances as they can cause hazards.
- This appliance must only be used for heating water.
- Always switch off and disconnect the urn from the mains supply when not in use or when cleaning.
- To prevent any risk of electrocution do not immerse the urn in water or any other liquid when cleaning and do not allow any water or liquid to come into contact with any of the electrical connections or controls.
- Do not allow the cord to hang over the edge of the work surface, to touch wet or hot surfaces or become twisted.
- The urn should not be lifted whilst connected to the mains.
- The urn should not be carried whilst it contains water, particularly hot or boiling water.
- Maintenance other than cleaning should be performed by the manufacturer while this product is within guarantee (contact our service help line) or otherwise by a qualified service engineer.
- If the mains cord or plug of this appliance is damaged it must be replaced by the manufacturer. Contact our service help line for assistance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

- This appliance is not suitable for installation in an area where a water jet could be used.
- This appliance must not be cleaned by a water jet.
- This appliance is only to be installed in locations where its use and maintenance is restricted to trained personnel.
- For correct operation this appliance should be operated in an ambient temperature between 22 - 28 °C.

## Installation

### Preparation

- Remove any plastic film from the urn and wipe over all surfaces with a damp cloth.
- Check that the voltage shown on the rating plate is suitable for your supply.
- Before general use it is recommended that the urn is boiled twice discarding the water each time.

### Fitting a plug

 
The mains lead of this appliance will already be fitted with a BS1363 13A plug. In the event of replacing a fuse, a 13 amp fuse approved by ASTA or BSI must be used.

If the plug is not suitable for your socket then the plug must be removed. Moulded on plugs should be cut off. When cut off, this plug is a shock hazard if inserted into a socket outlet and must therefore be disposed of safely. An appropriate plug should be fitted as follows:

**IMPORTANT:** The wires in the mains lead are coloured in accordance with the following code:

Green-and-Yellow – Earth  
Blue – Neutral  
Brown – Live

As the colours in the mains lead may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire, which is coloured green-and-yellow, must be connected to the terminal in the plug which is marked with the letter E or the earth symbol  or coloured green or green-and-yellow.

The wire, which is coloured blue, must be connected to the terminal which is marked with the letter N or coloured black or blue.

The wire, which is coloured brown, must be connected to the terminal which is marked with the letter L or coloured red or brown.

Make sure that the connections are tight and that there are no loose strands of wire and no insulation trapped under the terminals. Tighten the clamp in the plug making sure that it grips the outer covering of the cord. In a 13A (BS 1363) fused plug, fit a 13A fuse. Tighten the plug cover securely.

If you are in any doubt, consult a qualified electrician.

**IMPORTANT:** The supply cord on this appliance is of a special type. If replaced, only a Burco supply cord must be used. The supply cord may become warm when the appliance is in use.

**WARNING: This appliance must be earthed.**

### Location

- Not less than 100mm from any wall.
- This appliance should be placed on a flat, horizontal surface.

## Using

**IMPORTANT:** Always put water in the urn before switching on.

- Remove the lid by turning anti-clockwise and fill the urn with the desired amount of water.

- Do not fill above the 'MAX' capacity mark.

**WARNING** If the urn is over filled there is a risk that boiling water may be ejected.

- Replace the lid turning clockwise to lock.
- Plug in at the wall socket. The green light illuminates to indicate the urn is connected to the mains supply.
- The amber light illuminates to indicate the element is switched on. This will go on and off as the thermostat maintains the selected temperature.
- Turn the control knob to 6.
- When the water boils, turn the control knob to approximately setting 5 to keep it simmering. An exact setting will be found by experience.

To maintain the water at a set temperature the following approximate temperatures can be used as a guide:

Approximate temperature	Knob setting
20°C	1
32°C	2
45°C	3
63°C	4
81°C	5
96°C	6

If it is necessary to keep the water at an exact temperature, use a thermometer. Stir the water before taking the temperature and when the desired temperature has been reached, turn the control knob slowly to the left until a click from the thermostat is heard and the amber light goes out. The thermostat will cycle on and off to maintain this temperature.

The urn is not suitable for boiling liquids other than water or for boiling water containing small solid particles. If the water is being boiled for tea making, it is best to make the tea in another container to prevent staining of the inside of the urn.

### Serving

- There are two open positions, one self-holding so that the tap remains open, and the other self-closing so that the tap closes as soon as the lever is released. To change the tap position, turn the tap lever through 180°.
- Open the tap by depressing the tap lever into the horizontal position.
- Close the tap by returning the lever to a vertical position.

### After use

- Switch off at the wall socket and disconnect from the mains supply. Water may be left in the urn when it is not in use for short periods, but to maintain a supply of fresh water, it should be emptied periodically and cleaned out.

## Protective cut-out

The heating element is fitted with a thermal cut-out which protects the urn from damage if it is allowed to boil dry or is switched on without water.

## Guarantee registration

Appliance model

Serial no.

Date of purchase

Customer name

Address

CUT HERE & DETACH

Please help us to further improve our products by ticking the one

main reason for purchase

Price

Styling/Appearance

Features

Previous Burco ownership

Dealer recommendation

Service back-up

Other (please state)

Where did you buy your Burco appliance ?

Dealer/Retailer

Would you like more information on Burco products?

Yes

No