

PANTHEON

Catering Equipment



CP15

Operating Manual

Introduction

Thank you for purchasing a Pantheon Catering Equipment product. In this booklet you will find instructions for safe operation so please read carefully and retain for future reference.

Warnings and Precautions

The following warnings and precautions are important and must be observed:

- Ensure voltage and frequency power requirements for the appliance match that of the supply.
- The machine must be earthed when used. There is a danger of electric shock if it is not earthed.
- In case of emergency, please turn off the power switch and unplug the machine.
- If the electric wire becomes damaged, a qualified engineer or the manufacturer must replace it.

Pantheon Catering Equipment is not responsible for any accidents or faults caused by amendments made to the machine or improper use by the user.

General Information

- Coarsely ground coffee is the most suitable for this appliance
- Never immerse the appliance in water
- Never switch on the appliance if there is no water in the tank
- Always use the appliance on a dry, level, heat-resistant surface, away from the edges. Ensure that your hands are dry.

Installation

1. Before using the appliance, first clean the filter basket, filter cover, percolator pipe and inside of tank with a non-abrasive detergent
2. Place the appliance upright on a firm, flat surface

3. Place the grate in the tank
4. Plug the appliance into a grounded socket (while the appliance is switched off)
5. The appliance is now ready to use

Making Coffee

Warning: The outside of the appliance gets very hot during use. Do not touch.

- When making coffee, at least half of the total capacity of the machine must be utilized.
 - Coarsely ground coffee is preferable.
 - If another type of coffee is used, a paper filter is required.
1. Fill the tank with COLD water in accordance with the amount of coffee required
 2. Place the ground coffee in the filter basket. 6 grams per cup is a general indication of the quantity required.
 3. Seal the filter basket by attaching the filter cover.
 4. Place the percolator pipe and the filter basket in the tank. Ensure that the bottom of the percolator pipe is positioned firmly on the cavity of the base.
 5. Replace the top cover on the appliance.
 6. Switch on the appliance. The light in the switch should now illuminate. When the green pilot goes on, the coffee is ready and will be kept warm automatically.
 7. When approximately three cups of coffee remain in the tank or when coffee can no longer be seen in the glass gauge, unplug the cord from the electric outlet and turn off the switch.
 8. To re-heat cold coffee, first ensure that the basket and percolator pipe are removed and that at least 12 cups of coffee remain in the tank. Then, simply plug the appliance in and turn the switch on.

Heating Water for Instant Beverages

Plain water may be heated in the percolator for use with instant beverages.

1. Simply fill the clean appliance with cold water to the desired cup level and place the **percolator pipe and the empty basket** into position as for making coffee.
2. Plug the appliance in and switch to the “on” position until the perking stops.
3. Unplug the appliance when less than 3 cups of water remain.

When the appliance is used to heat water only, it must be thoroughly cleaned after each use. In addition, a special weekly clean using vinegar to remove mineral deposits must be carried out. If these deposits are not removed, pitting of the metal can occur and this will result in damage to the appliance. Please see special cleaning instructions below for full details.

Cleaning After Use

1. Remove the filter basket and percolator pipe from the tank and empty the filter basket. This process is best carried out once the coffee dregs have dried slightly as this makes it easier.
2. Rinse the filter basket, filter cover and percolator pipe under a tap.
3. Rinse the inside of the tank until it is clean.
4. The appliance is now ready to use again.

Special Cleaning

Failure to regularly clean the appliance properly following these instructions will cause degradation in performance, resulting in weak, lukewarm coffee and may even cause the appliance to stop perking. To keep the appliance working properly, please follow these instructions.

If the appliance is used daily for coffee, a special cleaning every two weeks is required. If the appliance is used daily for heating water, then the special cleaning is required every week.

1. Clean the filter basket , filter cover and top cover with a non-abrasive detergent and then dry them off with a soft dry cloth.
2. The inside of the tank and the percolator pipe are made of stainless steel and can be cleaned with a scouring agent, possibly in combination with a scouring pad.
3. If the appliance is to function properly, the cavity in the middle of the base must be kept free of lime scale and coffee deposits. Use a scale remover if necessary.
4. The inside of the glass gauge can be cleaned with the aid of the enclosed pipe cleaner. First, unscrew the gauge cap, then insert the pipe cleaner into the glass gauge from above. A brush may also be used to clean the percolator. Do not dismantle the glass gauge in the process.
5. To clean the tap, unscrew the handle and then move a brush up and down through the tap. Next, insert a brush through the opening inside the appliance to clean the tap connection. Wash the tap handle in hot, soapy water and rinse. Replace the tap.
6. Do not use baking soda to clean the appliance as it can discolour and pit the metal.

Thermal Cut-Out

The appliance is fitted with a thermal cut-out. If this is activated, the appliance will turn itself off, although the lamp in the switch will remain on. In order to make the appliance operation again, it must first be unplugged from the mains.

The appliance must be unplugged before it can reset and should then be allowed to cool down to a safe temperature. Once this has occurred, the reset button on the base of the appliance can be pressed.

If this does not cause the appliance to start working again, please consult the dealer from whom you purchased the appliance. Additionally, this safety

device may have been activated during transportation of the appliance, so if it does not work on initial use, please follow these instructions.

Technical Data

Specifications:

Model:	CP15
Voltage (V)	230V AC 50Hz
Power (W)	1520W / 200W
Weight (Kg)	5.4kg
Dimensions (mm)	260mm (dia) x 606mm h
Volume	15 litres
Minimum Quantity	7.5 litres
Capacity per Hour	20 litres (approx.)
Time to Make Max Qty.	50 minutes (approx.)