



Installation, Operating and Servicing Instructions

Panther Light Duty Hot Cupboards PLH36, PLH45, PLH60, PLH90

Please make a note of your product details for
future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____

PANTHER

CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3 - 4
Operating Instructions	4
Cleaning	4
Servicing, Maintenance and Component Replacement	4
Fault Finding	5
Spare Parts List	5
Service Information and Guarantee	6

IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



WARNING!

This symbol is used whenever there is a risk of personal injury.



CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.



NOTE:

This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS



This appliance must be installed, commissioned and serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

During operation parts may become hot - avoid accidental contact.

Disconnect this appliance before servicing, maintenance or cleaning.

TECHNICAL DATA

Model	Height (mm)	Width (mm)	Depth (mm)	Weight (kg)
PLH36	900	360	600	28
PLH45		450		37
PLH60		600		45
PLH90		900		61

CHECK LIST OF ENCLOSURES

Warranty card
Instructions Manual
Shelves

INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Install this appliance on a level surface ensuring all vents are unobstructed. Any partitions, walls or furniture must be of non-combustible material and not be closer than 100 mm.

Power Ratings

Model	Power (kW)	Current (A)
PLH36	0.75	3.3
PLH45	0.75	3.3
PLH60	1.5	6.5
PLH90	2.0	8.7

OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

Connect the appliance to an electrical supply using the attached plug and lead.

Power to the appliance is indicated by illumination of the green neon.

Turn the control knob to the desired setting, this will illuminate the amber neon. When the amber neon goes out, the appliance has attained temperature. Periodic illumination of the amber neon indicates the thermostat controlling the element to maintain a constant temperature.

CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Clean all panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

All servicing, maintenance and component replacement on these appliances should be carried out by one of our recommended service engineers.

FAULT FINDING

Please refer to the Service Helpdesk number on the final page of this manual.

SPARE PARTS LIST

Part No.	Part Description	Used on
EL170	Element 750W	PLH36, PLH45
EL171	Element 1500W	PLH60
EL172	Element 2000W	PLH90
FE10	Adjustable foot	All
HA106	Door handle	
HI24	Door hinge	
HI25	Door hinge plate	
KN54	Control knob	
NE37	Amber neon	
NE38	Green neon	
PL143	Cable & plug	
SH120	Shelf 310 x 530	PLH36
SH121	Shelf 400 x 530	PLH45
SH123	Shelf 850 x 530	PLH90
SH124	Shelf 550 x 530	PLH60
TH106	Thermostat	All

SERVICE INFORMATION

AUTHORISED SERVICE AGENTS

Catering equipment should be routinely serviced to ensure a long, trouble free life. We recommend that this appliance is serviced every 6 months by a competent engineer. All service work, other than routine cleaning, should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

For help regarding the installation, maintenance and use of your Lincat equipment, please call:-

LINCAT SERVICE HELP DESK

 **+44 (0) 1522 875520**

Please quote both the model and serial numbers from the data plate attached to the unit. Give brief details of the service requirement, and if possible the product codes of any spare parts you require.

Work carried out under warranty will normally be undertaken during normal working hours, i.e. Monday to Friday, 8.30 a.m. - 5.00 p.m.

CONDITIONS OF GUARANTEE

The guarantee does not cover:-

- 1) Accidental breakage or damage
- 2) Operational misuse, wear and tear from normal usage, incorrect adjustment, or neglect.
- 3) Incorrect installation, maintenance, modification or unauthorised service work.