



INSTRUCTION REF: IN120

ISSUE No. 2

DATE 21/05/14

Page 1 of 19

TELEPHONE:

SERVICE (44) 01332 875665

FAX:

SERVICE (44) 01332 875536

## INSTRUCTIONS

### LAMP & HEATED BASE UNITS

#### MODELS:

C2LU / C3LU / C4LU

CCBM / CCSU2

3021 / 3022

SAFETY INSTRUCTIONS

TECHNICAL DATA

INSTALLATION INSTRUCTIONS

OPERATION INSTRUCTIONS

MAINTENANCE INSTRUCTIONS

EXPLODED VIEW / PARTS LIST

FAULT DIAGNOSTICS

WIRING DIAGRAM

WARRANTY INFORMATION

DISPOSAL INFORMATION

### Customer Information

MODEL NUMBER: \_\_\_\_\_  
SERIAL NUMBER: \_\_\_\_\_  
PURCHASE DATE: \_\_\_\_\_  
DISTRIBUTOR: \_\_\_\_\_



INSTRUCTION REF: IN120

ISSUE No. 2

DATE 21/05/14

Page 2 of 19

TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

## SAFETY INSTRUCTIONS

### IMPORTANT, PLEASE READ INSTRUCTIONS FULLY BEFORE USE

These appliances have been designed to keep food hot prior to serving and therefore during its use parts of the appliance will become very hot. All personnel must be given sufficient supervision and training in the safe use of this appliance.

**ALL APPLIANCES OTHER THAN THOSE FITTED WITH A SEALED MOULDED PLUG MUST BE FITTED BY A QUALIFIED ELECTRICIAN, IN ACCORDANCE WITH CURRENT REGULATIONS.**

The unit should be installed in compliance with the INSTALLATION INSTRUCTIONS and the NATIONAL REGULATIONS in force at the time. Particular attention should be paid to the Health and Safety at Work Act.

To prevent shocks, all appliances whether gas or electric, must be earthed.

To avoid scratching the highly polished exterior surface of this equipment whilst in transit, the protective film on the exterior surfaces has NOT been removed.

It is IMPORTANT that this protective film is peeled off before the equipment is used.

### **ENSURE THE APPLIANCE IS ISOLATED FROM THE POWER SUPPLY BEFORE INSTALLING, CLEANING OR MAINTAINING THE APPLIANCE**

These products have been designed, constructed and marketed in compliance with safety requirements of :

**EEC Directive "Low voltage" 73/23;**

**EEC Directive 93/68.**

This product is suitable for contact with foodstuffs, and complies with **EEC Directive 89/109.**

The product(s) stated above are designed and built to comply with the following standards:  
**BS EN 60335-1**



TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

**TECHNICAL DATA****Lamp Units**

	<b>C2LU</b>	<b>C3LU</b>	<b>C4LU</b>
<b>Nominal Voltage</b>	240v 50Hz ~ AC		
<b>Nominal Current (Amps)</b>	4.1a	5.4a	8.3a
<b>Nominal Wattage (Watts)</b>	1000w	1300w	2000w
<b>External Dimensions (W x D x H mm)</b>	795x 450 x 725	1095 x 450 x 725	1425 x 450 x 725
<b>Weight: (kg)</b>	14	19	28

**Carvey Units**

	<b>CCBM</b>	<b>CCSU2</b>
<b>Nominal Voltage</b>	240 v 50Hz ~ AC	
<b>Nominal Current (Amps)</b>	4a	5.5a
<b>Nominal Wattage (Watts)</b>	850w	1300w
<b>External Dimensions (W x D x H mm)</b>	660 x 330 x 850	970 x 441 x 850
<b>Weight: (kg)</b>	14	24

**Heated Base Units**

	<b>3021</b>	<b>3022</b>
<b>Nominal Voltage</b>	240 v 50Hz ~ AC	
<b>Nominal Current (Amps)</b>	2a	3.5a
<b>Nominal Wattage (Watts)</b>	400w	800w
<b>External Dimensions (W x D x H mm)</b>	675 x 500 x 85	975 x 500 x 85
<b>Weight: (kg)</b>	10	12

**INSTALLATION INSTRUCTIONS****ELECTRICAL INSTALLATION**

**ALL APPLIANCES OTHER THAN THOSE FITTED WITH A SEALED MOULDED PLUG MUST BE FITTED BY A QUALIFIED ELECTRICIAN, IN ACCORDANCE WITH CURRENT REGULATIONS.**



INSTRUCTION REF: IN120

ISSUE No. 2


DATE 21/05/14

Page 4 of 19

TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

### **Instructions To Mount Sneeze Guard**

(C2LU / C3LU / C4LU / CCSU2)

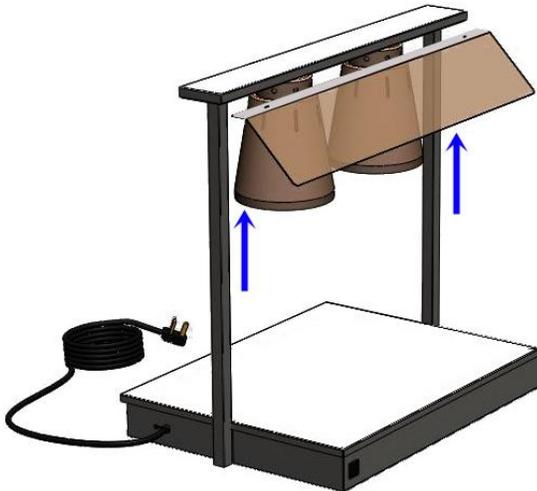

To locate the sneeze guard, align the holes in the sneeze guard with the holes in the underside of the gantry.

The sneeze guard may be fitted on either side of the machine. Once the holes are aligned tighten up using the screws and washers provided.

The above applies for machines listed below.

### **Instruction To Fit Heated Lamps**

(C2LU / C3LU / C4LU / CCBM / CCSU2)

Fit lamps into lamp holders by screwing them in to the lamp holders

### **Operation**

1. Switch on power supply, the red lamp will indicate power is ON
2. Turn the temperature dial to the required setting (1-2½ can be used for simmering and 3 for maximum continuous heat) the green lamp will show indicating power to the element and will extinguish when the desired temperature is reached.

This procedure will be repeated automatically as the thermostat maintains a constant temperature.

Use for serving from cook pots (except in the case of the carvery unit). Wipe down regularly after switching off from the mains.



INSTRUCTION REF: IN120

ISSUE No. 2

DATE 21/05/14

Page 5 of 19

TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

## **CLEANING AND MAINTENANCE**

### **ENSURE THE APPLIANCE IS ISOLATED FROM THE POWER SUPPLY BEFORE INSTALLING, CLEANING OR MAINTAINING THE APPLIANCE**

Ensure that the appliance has cooled sufficiently.

Cleaning should be carried every day. Clean the external surfaces of the appliance with a damp cloth. Avoid using abrasive materials.

**CAUTION:** Never clean the appliance with water jets.

Appliance should be annually P.A.T (Portable Appliance Testing) tested for continued electrical safety.

## **MAINTENANCE INSTRUCTIONS**


**MAINTENANCE AND SERVICE MUST ONLY BE UNDERTAKEN BY A QUALIFIED ELECTRICIAN / ENGINEER**

**IF THE SUPPLY CORD BECOMES DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD**



TELEPHONE: SERVICE (44) 01332 875665  
 FAX: SERVICE (44) 01332 875536

**EXPLODED VIEW**  
**C2LU / C3LU / C4LU**

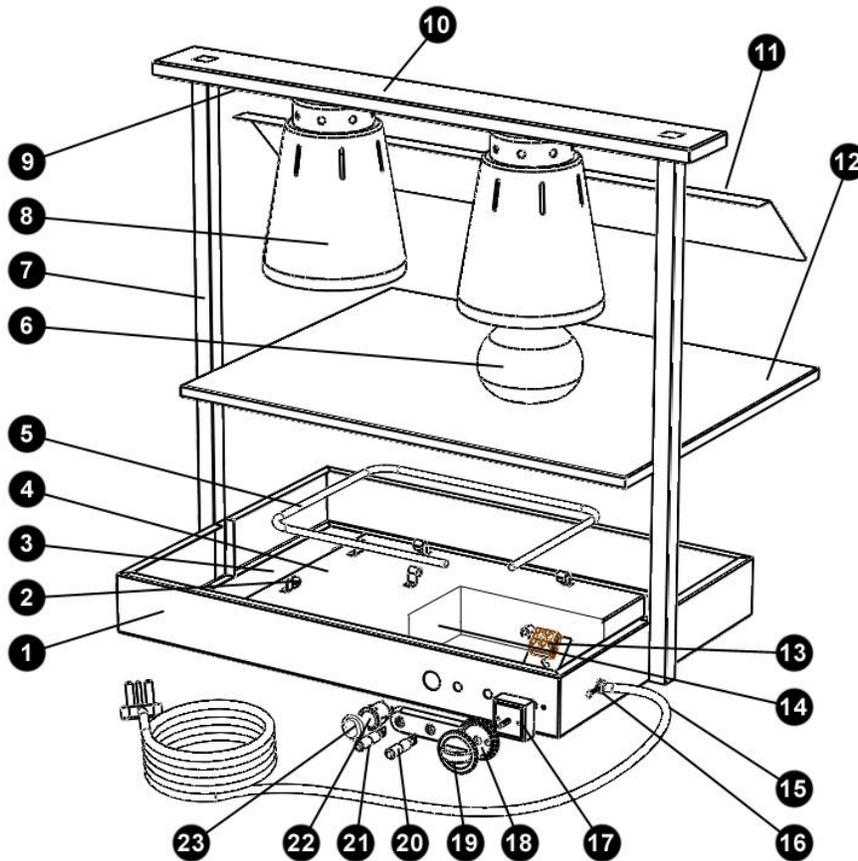

*C2LU unit shown above*

**PARTS LIST**  
**C2LU / C3LU / C4LU**


NO.	Description	C2LU	C3LU	C4LU
1	*Body	NO CODE	NO CODE	NO CODE
2	Element Clip	AS2640ELC	AS2640ELC	AS2640ELC
3	*Base	NO CODE	NO CODE	NO CODE
4	*Element Stand	NO CODE	NO CODE	NO CODE
5	Element	ELDU00400	ELDU00400	ELPS40800
6	Lamp	ELHL27275	ELHL27275	ELHL27275
7	*Gantry Leg	NO CODE	NO CODE	NO CODE
8	Lamp Holder & Shade	CPSH00001	CPSH00001	CPSH00001
9	*Gantry Bottom	NO CODE	NO CODE	NO CODE



TELEPHONE: SERVICE (44) 01332 875665  
 FAX: SERVICE (44) 01332 875536

10	*Gantry Top	NO CODE	NO CODE	NO CODE
11	Sneeze Screen	HDPB50792	HDPB5104	HDPB51423
12	*Top	NO CODE	NO CODE	NO CODE
13	Terminal Block	TERMBRKT1	TERMBRKT1	TERMBRKT1
14	*Wire Guard	NO CODE	NO CODE	NO CODE
15	Mains Cable	MAINSLEAD	MAINSLEAD	MAINSLEAD
16	Cable Bush	BUSR06003	BUSR06003	BUSR06003
17	Simmerstat	SATT37071	SATT37071	SATT37071
18	Bezel	BEZELCBOX	BEZELCBOX	BEZELCBOX
19	Control Knob	KNOBTYPED	KNOBTYPED	KNOBTYPED
20	Red Neon	LNRE2211P	LNRE2211P	LNRE2211P
21	Green Neon	LNGN2211P	LNGN2211P	LNGN2211P
22	Round Switch	SWRE00008	SWRE00008	SWRE00008
23	Round Switch Cover	SWRE00008C	SWRE00008C	SWRE00008C

**EXPLODED VIEW  
CCBM**

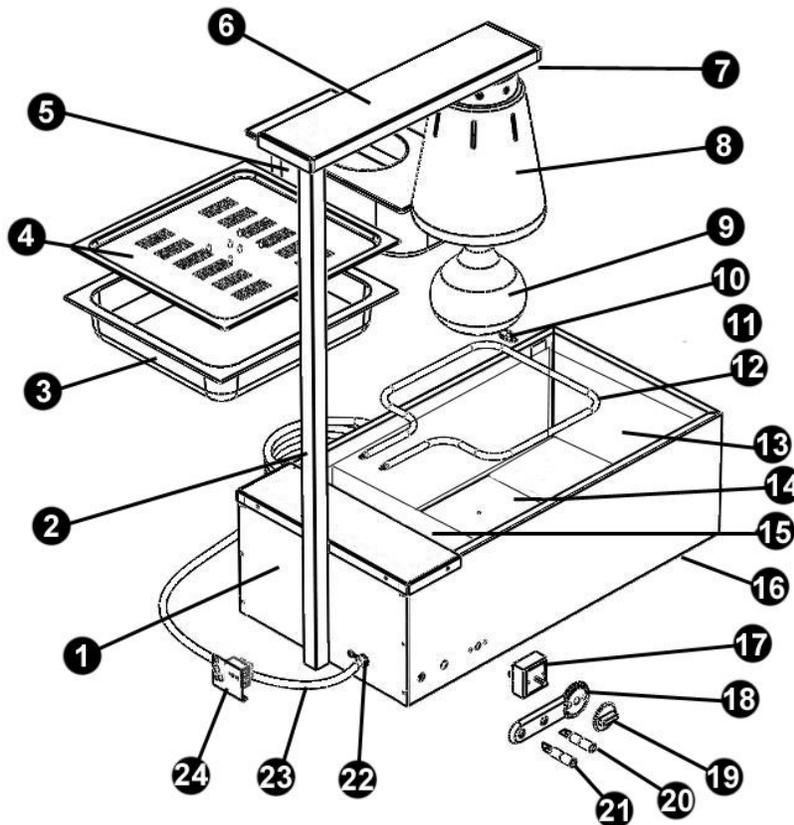



INSTRUCTION REF: IN120

ISSUE No. 2

DATE 21/05/14

Page 8 of 19

TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

**PARTS LIST**


**CCBM**

NO.	Description	CCBM
1	*Body	NO CODE
2	*Gantry	NO CODE
3	2/3 65mm Gastronorm	BAMA23065
4	2/3 20mm Gastronorm Perforated	BALD23065
5	1/3 150mm Gastronorm Pot and Lid set	BAMA30150
6	*Gantry Top	NO CODE
7	*Gantry Bottom	NO CODE
8	Lamp Holder & Shade	CPSH00001
9	Lamp	ELHL27275
10	Element Clip	AS2640ELC
11	*Side Guard	NO CODE
12	Element	ELBM60892
13	*Front Guard	NO CODE
14	*Element Stand	NO CODE
15	*Rear Guard	NO CODE
16	*Base	NO CODE
17	Simmerstat	SATT37071
18	Bezel	BEZELCBOX
19	Control Knob	KNOBTYPED
20	Red Neon	LNRE2211P
21	Green Neon	LNGN2211P
22	Cable Bush	BUSR06003
23	Mains Lead	MAINSLEAD
24	Terminal Block	TERMBRKT1



TELEPHONE: SERVICE (44) 01332 875665  
 FAX: SERVICE (44) 01332 875536

**EXPLODED VIEW**  
**CCSU2**

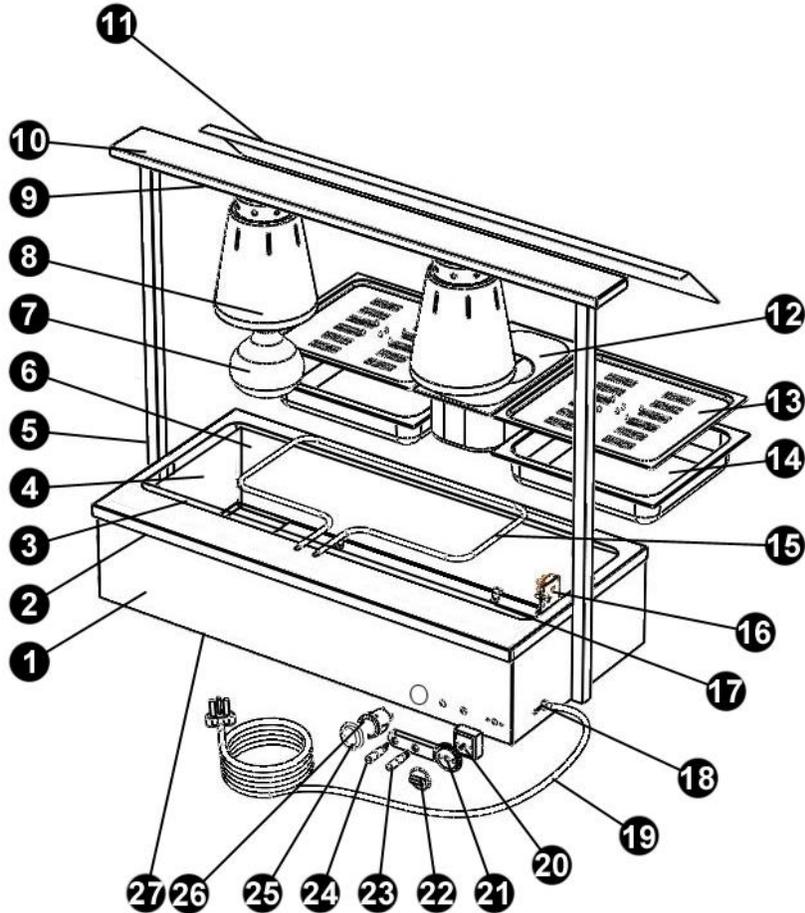

**PARTS LIST**  
**CCSU2**


NO.	Description	CCSU2
1	*Body	NO CODE
2	*Top	NO CODE
3	*Front Guard	NO CODE
4	*Side Guard	NO CODE
5	*Gantry Leg	NO CODE
6	*Rear Guard	NO CODE
7	Lamp	ELHL27275
8	Lamp Holder & Shade	CPSH00001



TELEPHONE: SERVICE (44) 01332 875665  
 FAX: SERVICE (44) 01332 875536

9	*Gantry Bottom	NO CODE
10	*Gantry Top	NO CODE
11	Sneeze Screen	HDPB51032
12	1/3 150mm Gastronorm Pot and Lid Set	BAMA30150
13	2/3 20mm Gastronorm Perforated	BALD23065
14	2/3 65mm Gastronorm	BAMA23065
15	Element	ELBM80902
16	Terminal Block	TERMBRKT1
17	Element Clip	AS2640ELC
18	Cable Bush	BUSR06003
19	Mains Cable	MAINSLEAD
20	Simmerstat	SATT37071
21	Bezel	BEZELCBOX
22	Control Knob	KNOBTYPED
23	Red Neon	LNRE2211P
24	Green Neon	LNGN2211P
25	Round Switch ( <i>Rectangle Switch prior 21/5/2014</i> )	SWRE00008 ( <i>SWRE06165</i> )
26	Round Switch Cover	SWRE00008C
27	*Base	NO CODE

**EXPLODED VIEW**  
**3021 / 3022**

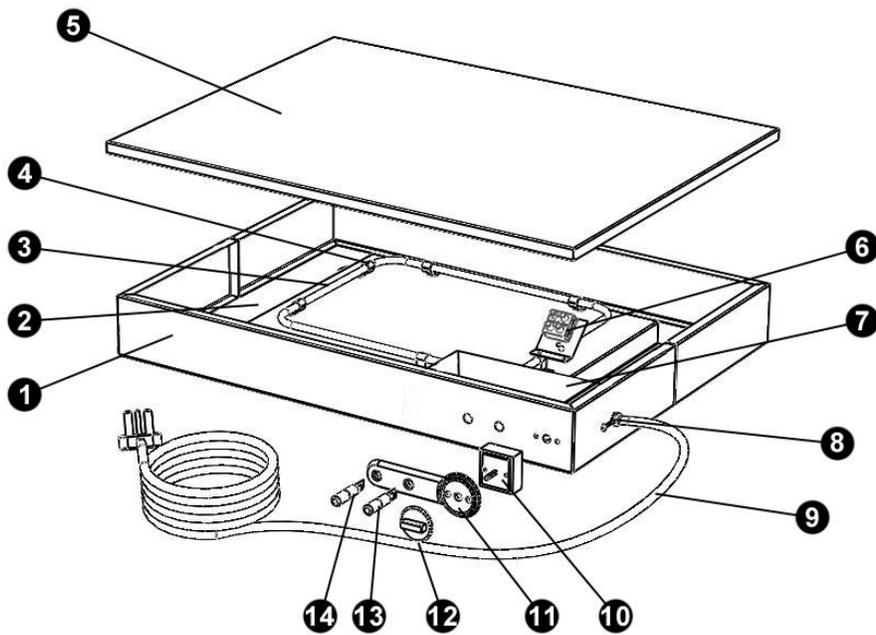



INSTRUCTION REF: IN120

ISSUE No. 2

DATE 21/05/14

Page 11 of 19

TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

**PARTS LIST**  
**3021 / 3022**

NO.	Description	3021	3022
1	*Body	NO CODE	NO CODE
2	*Base	NO CODE	NO CODE
3	Element	ELDU00400	ELBM80902
4	Element Clip	AS2640ELC	AS2640ELC
5	*Top	NO CODE	NO CODE
6	Terminal Block	TERMBRKT1	TERMBRKT1
7	*Wire Guard	NO CODE	NO CODE
8	Cable Bush	BUSR06003	BUSR06003
9	Mains Cable	MAINSCABLE	MAINSCABLE
10	Simmerstat	SATT37071	SATT37071
11	Bezel	BEZELCBOX	BEZELCBOX
12	Control Knob	KNOBTYPED	KNOBTYPED
13	Red Neon	LNRE2211P	LNRE2211P
14	Green Neon	LNGR2211P	LNGR2211P

To place an spares order please contact our Official Spares Partners at



**First Choice Catering Spares LTD**

Contact them by telephone on **01543 577778**

Or alternatively visit their website at <http://www.firstchoice-cs.co.uk>

**FAULTS**

The most common fault is that the unit is not connected with the mains supply, and so the mains light does not come on.

Try another appliance in the socket, check the socket is turned on, check the wiring to and in the plug, and the plug fuse. One of these may cure your fault. If this is not the case, and for any other problems, first contact your distributor.

Any spares or replacements must conform to the relevant standards and the Health and Safety at Work Act and only be fitted by a qualified electrician or competent person.


**Parry Group Limited, Town End Road, Draycott, Derby, England DE72 3PT**  
**[www.parry.co.uk](http://www.parry.co.uk)**




TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

**WIRING DIAGRAMS**

C2LU

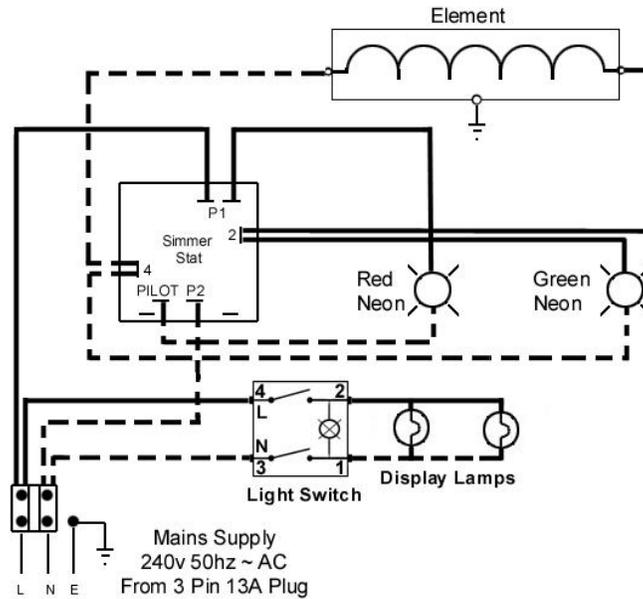


C3LU

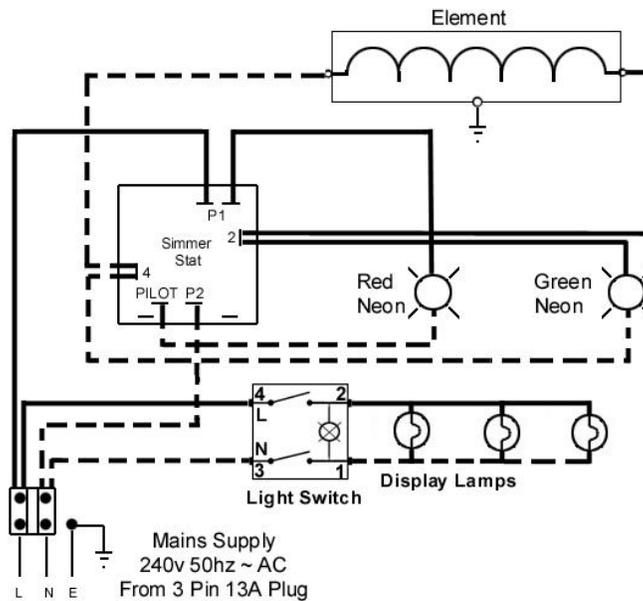




TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

C4LU

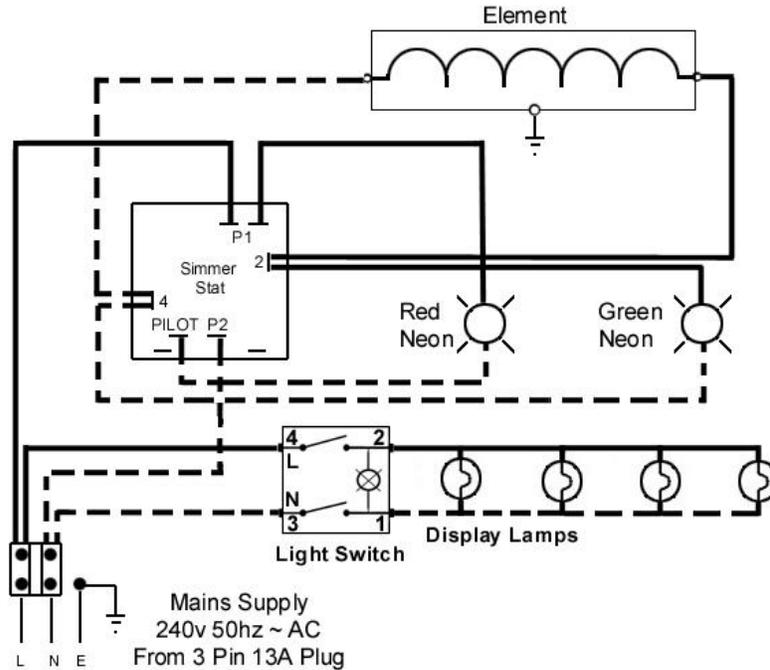


CCBM

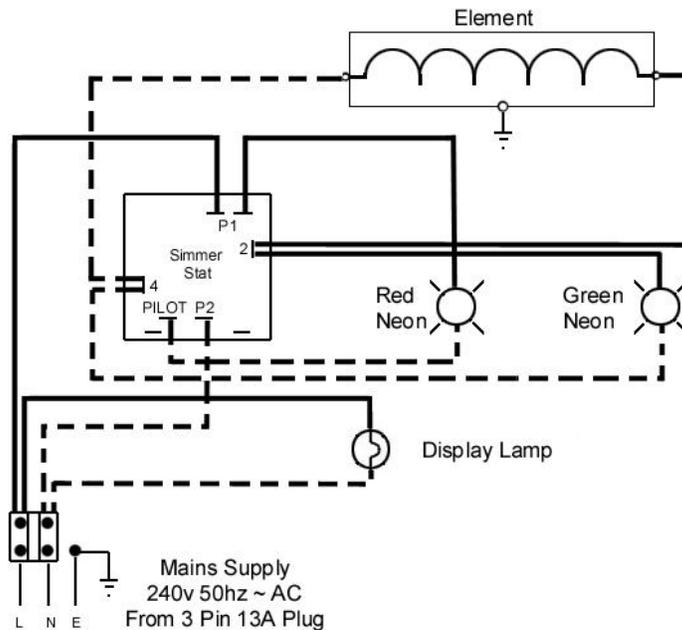




TELEPHONE: SERVICE (44) 01332 875665  
FAX: SERVICE (44) 01332 875536

CCSU2 (with rectangle switch)

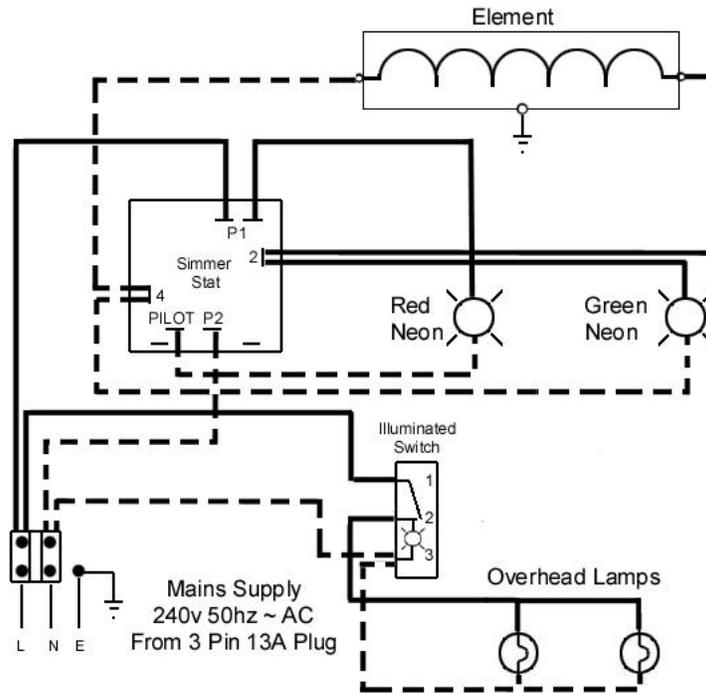

CCSU2 (with round switch)

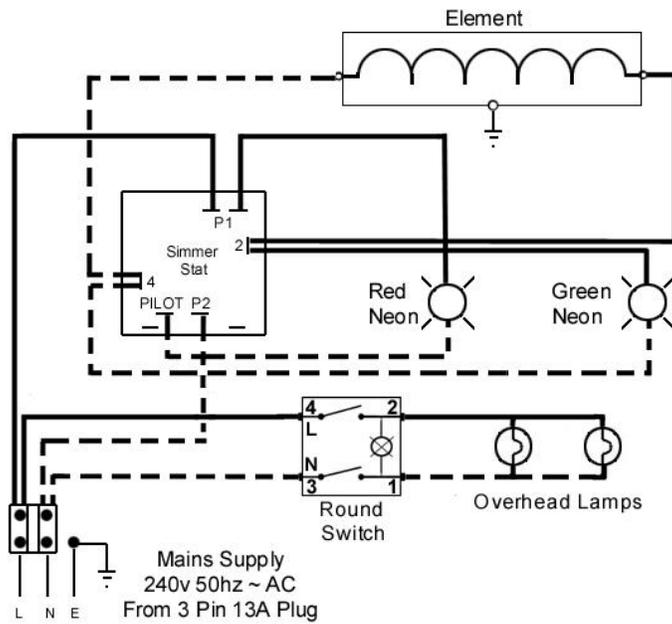




TELEPHONE:  
FAX:

SERVICE (44) 01332 875665  
SERVICE (44) 01332 875536

3021 / 3022

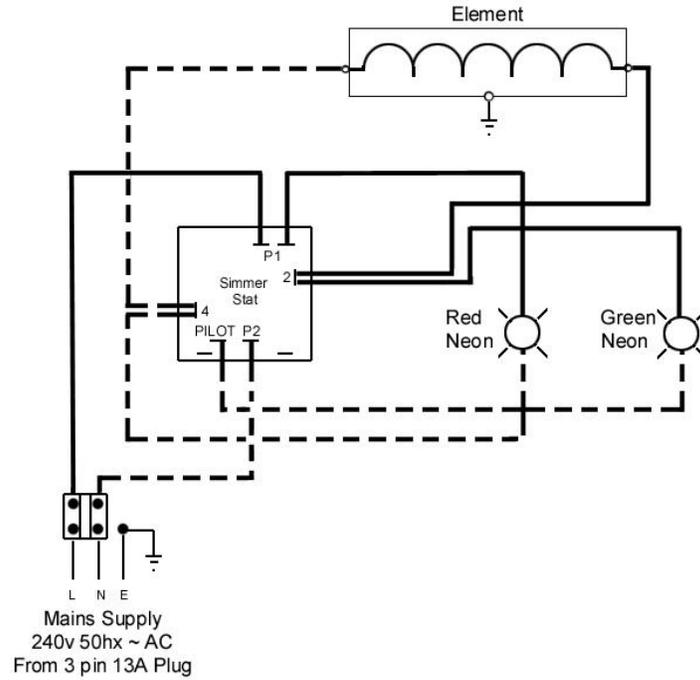



**INSTRUCTION REF: IN120**

**ISSUE No. 2**

**DATE 21/05/14**

**Page 16 of 19**

**TELEPHONE: SERVICE (44) 01332 875665**

**FAX: SERVICE (44) 01332 875536**

## **WARRANTY INFORMATION**

### **WARRANTY POLICY**

- The manufacturers warranty is only valid in the UK mainland & Northern Ireland, Western Isles, Inner Hebrides and Islands are parts only warranty.
- All service calls will be carried out between the hours of 8.00am – 5.00pm Monday to Friday only.
- We accept no responsibility for delays in replacing or repairing the equipment due to circumstances beyond our control.
- Your warranty can be immediately invalid if the installation of the equipment has not been installed in accordance with the manufacturers' instruction. (See installation details). Also the miss-use, alteration or unauthorised repairs of the equipment will invalidate the warranty.
- During the warranty period it is at Parrys Group Ltd discretion to repair or replace the equipment.
- Warranty only applies if the equipment has been used in a professional manor following the manufacturers' instructions and maintenance guide lines.
- The warranty covers defects in the material and components failure only we are not liable for trading loss, loss of perishable items, water damage, loss due to injury or fire damage.

### **WARRANTY REQUEST**

- Please ensure you have referred to the manufacturers' instruction before placing a warranty call with your distributor.
- Please ensure you obtain the model number before calling.
- Please ensure you have read the section not covered under warranty to avoid any unnecessary warranty charges.
- If the problem with the machine can not be resolved please contact the company that supplied you the machine.

**(SERVICE CALLS CANNOT BE PLACED DIRECT WITH PARRY GROUP LTD)**



**INSTRUCTION REF: IN120**

**ISSUE No. 2**

**DATE 21/05/14**

**Page 17 of 19**

**TELEPHONE: SERVICE (44) 01332 875665**

**FAX: SERVICE (44) 01332 875536**

**NOT COVERED UNDER WARRANTY**

- Installed incorrectly
- Fault due to poor maintenance.
- Resetting of equipment or circuit breakers.
- Abuse of the equipment
- Blockages eg, drains,
- Lime scale related issues
- Access arranged for service call and engineer refused access or customer not there.
- No faults with the machine.
- Setting up of equipment.
- Faulty electrics – eg, customers plug socket, plug, wiring, junction box fault, wrong fuse.
- Any damages caused by the customer.

All of the above are not covered under our warranty policy. Any costs incurred because of the above will be forwarded to the parties responsible for placing the call.

Failure to pay any warranty charges will result in the customers warranty been put on hold until the bill has been settled.

Any issues regarding the raised charges should be put in writing to our warranty department for further investigation.



INSTRUCTION REF: IN120

ISSUE No. 2

DATE 21/05/14

Page 18 of 19

TELEPHONE: SERVICE (44) 01332 875665

FAX: SERVICE (44) 01332 875536

### DISPOSAL INFORMATION

This appliance is marked according to the **European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE)**.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



A symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



**INSTRUCTION REF: IN120**

**ISSUE No. 2**

**DATE 21/05/14**

**Page 19 of 19**

**TELEPHONE: SERVICE (44) 01332 875665**

**FAX: SERVICE (44) 01332 875536**

Parry Catering recognises our obligations to the **EU DIRECTIVE** covering the waste disposal of electrical and electronic equipment (**WEEE**), Parry Catering are committed to this policy in order to help conserve the environment.

At the end of this unit's life you **MUST** dispose of it in an approved manner. You **MUST** not discard the unit or place it in the refuse bin.

You have several options:

- a) Take the unit to an approved WEEE scheme company, there will be one in your area.
  
- b) Take the unit to an approved waste disposal site; many sites are managed by your local authority.

Contact the Parry Group Ltd on the Sales number 01332 875544 for further information on disposal.

There will probably be a charge for this service which will depend on the physical location of the unit and size you will be given a collection price for a curb side collection based on commercial rates prevailing at the time.

It should be noted that the unit to be collected should be suitably packed and sealed to prevent dangerous gases and fluids from escaping. The condition of the unit must also be clean to comply with health and safety regulations.